 


**Kid Trax**  
**Rideamals**  
**Scout™**  
**Play & Ride Pony**

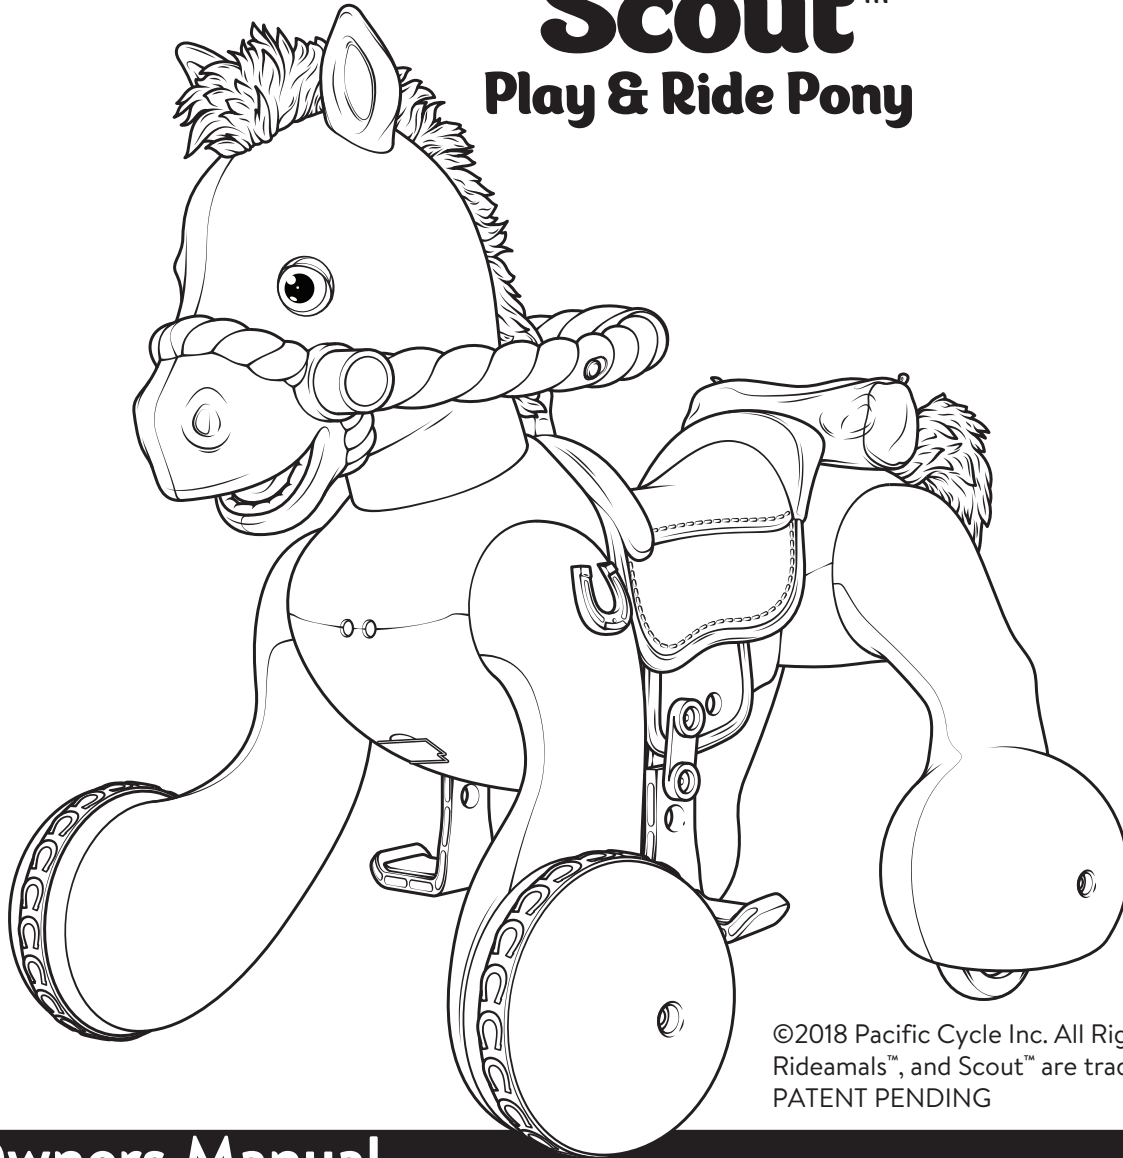

©2018 Pacific Cycle Inc. All Rights Reserved. Kid Trax®, Rideamals™, and Scout™ are trademarks of Pacific Cycle. PATENT PENDING

Made in China

## Owners Manual

KT1478WM

### ⚠ WARNING

This manual contains important safety and use information. Keep this manual for future reference.

- An adult must read this entire manual
- Adult supervision is required at all times

**Age:** 3 – 7

**Minimum weight to ride:** 25 lbs

**Maximum weight to ride:** 70 lbs

**Speed:** Trot 3.5 mph, Gallop 4 mph

**Battery:** 12V

neptune✓

# Safety

## WARNING

### **FAILURE TO FOLLOW THE SAFETY INSTRUCTIONS LISTED BELOW MAY RESULT IN SERIOUS INJURY OR DEATH.**

The owner's manual contains assembly, use and maintenance instructions.

#### **Child Safety Warnings**

- Adults supervising children must read and understand this entire manual before allowing any child to use this product.
- Adults must evaluate their own children as to maturity, strength, judgment and ability to follow safety rules. Published age guidelines are not a substitute for careful evaluation of your own child.
- Adults must teach children about thinking ahead while riding as this may be the first time a child has ever controlled a motorized ride-on toy. While you supervise, see through the child's eyes, and verbally teach them about steering and avoiding obstacles in the approved riding area.
- Riding a motorized ride-on toy can be a dangerous activity, even under the best of circumstances. Good choices regarding where and when to ride, constant adult supervision of riding, and practice and careful riding by the child can all help to minimize risk. However this ride-on toy is intended to move and therefore it is possible for the rider to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate.
- If this inherent risk is not acceptable, adults should not allow children to ride this ride-on toy.

## WARNING

#### **Safe Riding Warnings**

- Not to be used by children under three (3) years of age or children over seven (7) years of age
  - Do not exceed the maximum weight capacity of 70 lbs. (32 kg)
  - Do not allow children under 25 lbs to ride.
  - Do not allow more than one (1) rider.
- ADULTS AND SUPERVISORS, PLEASE NOTE:**
1. Always instruct all children of common sense rules and safe practices.
  2. Be aware that flat, hard surfaces provide the safest experience for child riders.
  3. Do not allow the child rider to operate the ride-on toy near streets, roads, sidewalks, walkways, or any other place where they may encounter other moving vehicles.
  4. Never leave children unattended with this ride-on toy. Continuous adult supervision is required.
  5. If necessary, adults and supervisors are always responsible for setting up gates and barriers to ensure a safe riding environment for the child rider.
  6. Be aware that this ride-on toy does not have braking capabilities. Allowing use of this ride-on toy in areas that require braking may cause rolls, crashes, serious injury, or death to the child rider.
  7. Teach children not to allow other children to use this ride-on toy. Communicate this message to other adults and supervisors of fellow children with which your child interacts.
  8. Sternly alert children that hands, legs, hair, and clothing can potentially get caught in moving parts. Ensure they never place a body part or piece of clothing near a moving part of the ride-on toy. Avoid loose clothing.
  9. Instruct children to always wear shoes when using the ride-on toy.
  10. Confirm that children do not have access to the charging equipment or come into contact with any part of the ride-on toy while it is charging.
  11. Firmly instruct children to use the ride-on toy in a safe manner. Unsafe behaviors include, but are not limited to:
    - Traveling at unsafe speeds
    - Not riding in the seated position
    - Riding at night or in any conditions of low visibility
    - Riding in any wet conditions including rain, snow, and ice
    - Any kind of off-road riding or walking: jumps, ramps, stairs, hills, sloped surfaces, or other actions involving any notable risk
    - Any kind of off-road riding: rough terrain, dirt, mud, gravel, or any others that involve notable risk
    - Riding near any pool or open body of water
    - Pushing, pulling, or shoving the driver in any way while operating the ride-on toy
    - Using the ride-on toy without the battery cover or any other safety cover fully closed
    - Pulling or hitching the ride-on toy with other similar moving ride-on toys or products
  12. CAUTION: Play food only. Not for consumption

## WARNING

### Battery and Charging Warnings

The following safety hazards may result in serious injury or death to the user of the ride-on:



#### Corrosive Material Warnings

- Battery posts, terminals and related accessories contain lead and lead compounds (acids) chemicals and are toxic and corrosive. Never open the battery.
- Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs with the skin or in the eyes, or if the chemical is swallowed, immediately call 911.



#### Flammable and Explosive Materials Warnings

- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied rechargeable battery and charger with the ride-on toy.
- Do not charge the battery near heat or flammable materials.
- Using the rechargeable battery and charger for any other product may result in overheating, fire or explosion. Never use the rechargeable battery and charger with another product.

- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Lifting the battery by the wires or charger can cause damage to the battery and may result in a fire. Always lift the battery by its case or handles.
- Plug wall charger directly into a wall outlet. Do not use an extension cord when charging as the use of an extension cord can cause a fire.



#### Electric Shock / Fire Warnings

- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring, circuitry in the charger may cause electric shock. Always keep the charger housing closed.
- Regularly check charger, supply cord and connector for wear and damage. Look for frayed or kinked wires, any exposed inner wires, any missing insulation. If any damage is observed do not plug in the charger and do not charge the battery.

## CAUTION

### Re-Charge Interval and Time Important!

- Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
- Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Do not use an extension cord when charging the ride-on toy.
- On average you will need to charge the battery for 10 hours and no more than 24 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Only an adult who has read and understands the safety warnings should handle, charge and recharge the battery.

## WARNING

### Product Warning

#### WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

### Assembly Warnings

- The ride-on toy must be assembled by an adult who has read and understands the instructions in this manual.
- Choking hazard to children under the age of 3 years. This ride-on toy contains small parts that are for adult assembly only. Keep small children away when assembling.
- Remove and dispose of all protective materials, plastic bags and packaging before assembly.

If you are unsure of any information in this manual or have a question regarding assembly or use please call customer service at 877-741-6154. Always keep this manual for reference and include it with resale of the ride-on toy.

# Pre-Ride Safety Checklist

## To be performed by a supervising adult

Before every ride, it is important to carry out the following safety checks. Do not ride a battery powered ride-on toy that is not in proper working condition! Replace any worn or broken parts as needed.

### Steering and Control

- ☐ The reins are tightened and secured.
- ☐ The reins are positioned so that the rider can easily operate and steer the ride-on. There must be no difficulty for the rider in turning and/or operating the hand operated push button.
- ☐ The reins are aligned so that the steering column and front wheels are oriented in the same direction.

### Wheels

- ☐ The wheels have no holes or are worn down in any one area and that the traction strips are intact and secured to the wheels.

 
### Ride-on

- ☐ For all electrical components, make sure:
  - The battery is fully charged
  - The charging cord is NOT attached to the ride-on in any way
  - All connectors are securely snapped in place and will not come detached while riding
  - No wiring is exposed, worn, or detached in any way; the motor is not hot to touch
  - All electrical buttons, including the power button, hand operated button, and any buttons for lights and sounds, work properly
  - If the ride-on's electrical components show any sign of damage or missing parts DO NOT RIDE until the condition is corrected
- ☐ **Make sure the ride-on is:**
  - Clean, dry, and in good condition
  - All plastic pieces, including saddle, stirrups, reins, and wheels are securely attached
  - There are no cracks or structural problems on the ride-on toy
  - If the ride-on toy shows any sign of damage or missing parts DO NOT RIDE IT until the condition is corrected
- ☐ **Make sure all safety labels are in place and readable, and understood by the rider.**

# Parts Checklist


Number	Part name	Quantity
1	Pony head	1
2	Head Bolt (located in horse's neck)	1
3	Pony body	1
4	Saddle horn (with phillips-head screw inserted)	1
5	Saddle horn cap	1
6	Apple	1
7	Carrot	1
8	Brush	1
9	Saddlebag	1
10	Battery Charger	1

## Required Tools

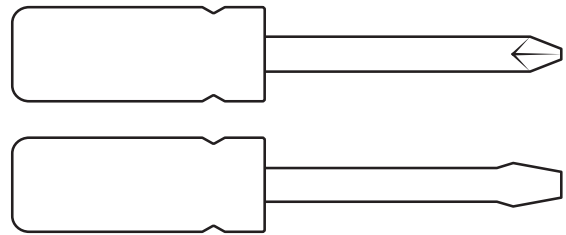

# Parts

 
Before you begin assembling, check that all parts listed are present.

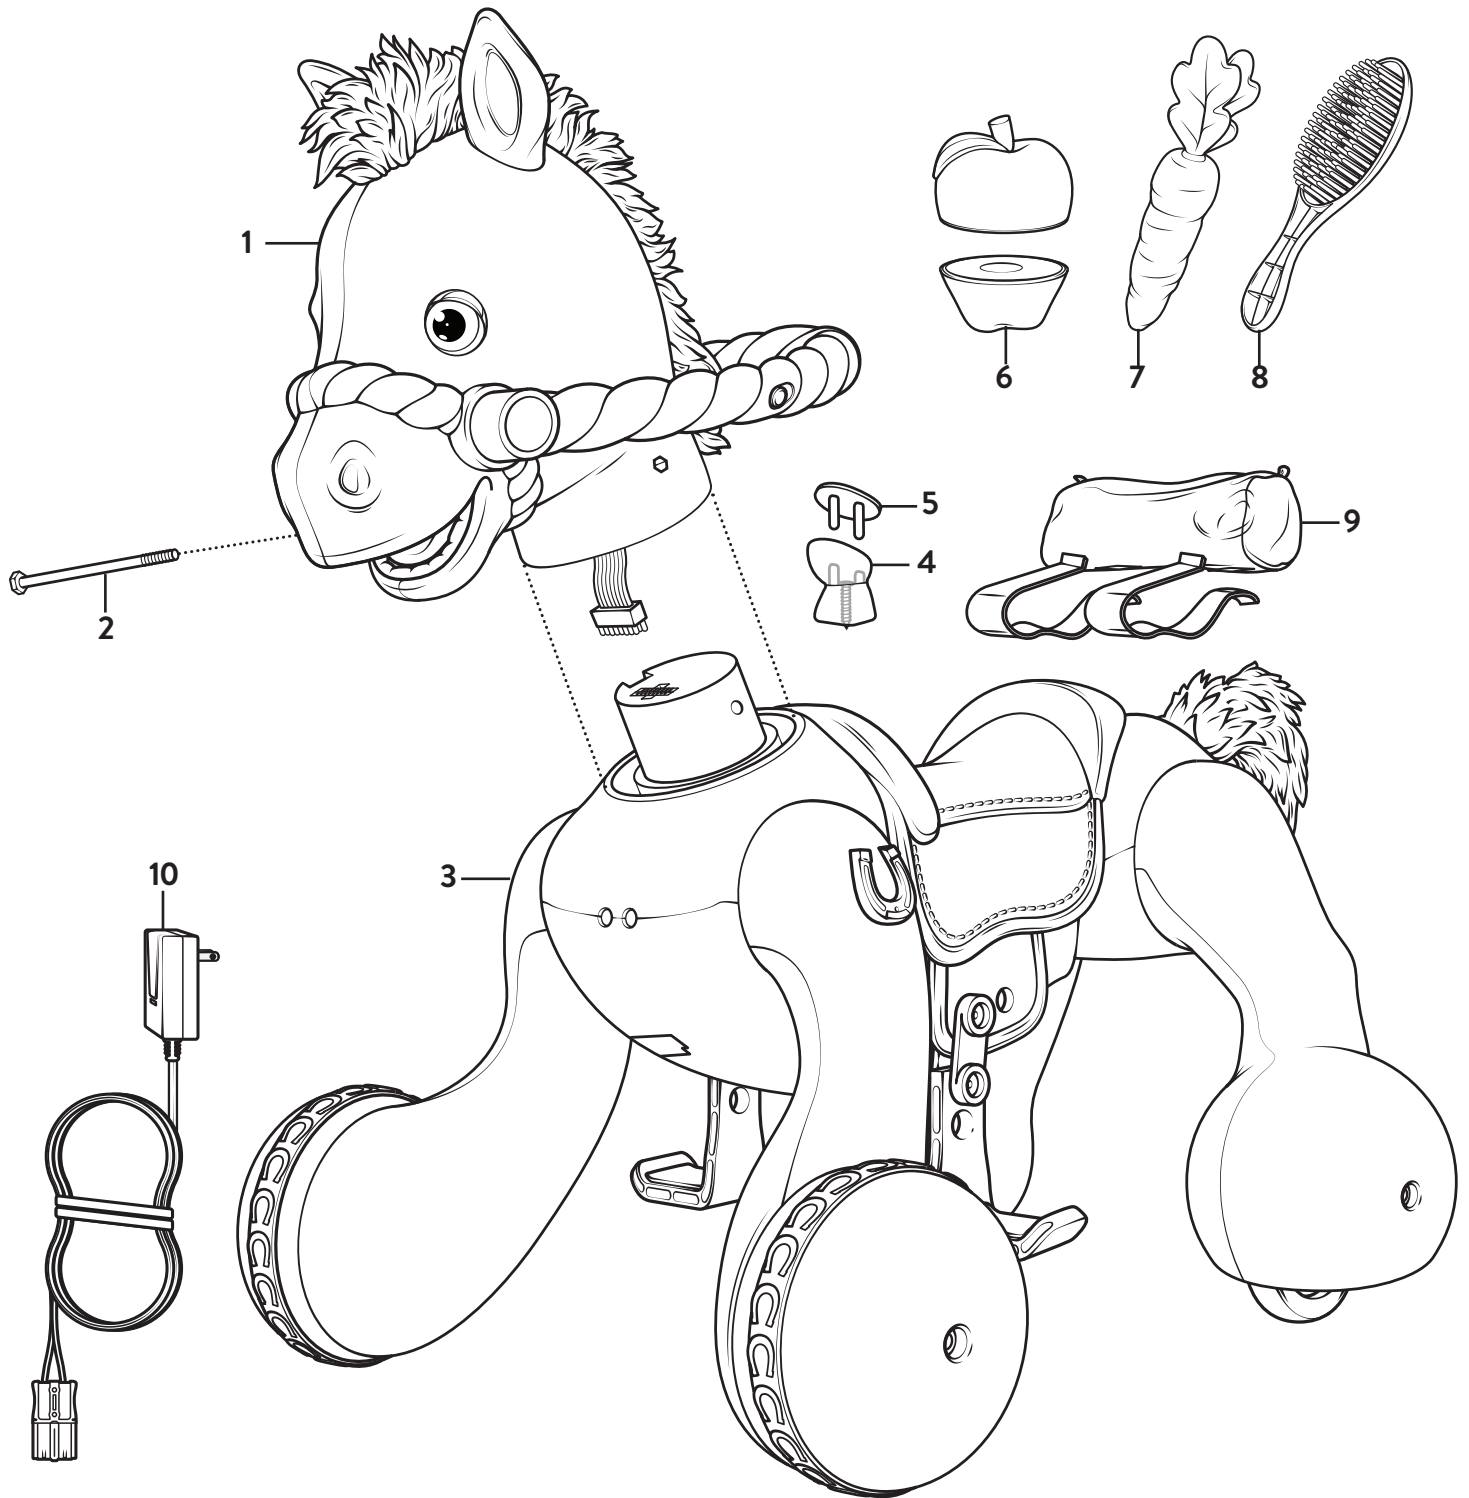


# Assembly

Follow the assembly steps in the order listed below.

  - ❶ Make one-time battery connection and 3-pin saddle connector located under the saddle. (See Page 8).
- ❷ Unscrew the bolt from the horse's neck.
- ❸ Attach the wires in the head to the connector in the neck.
- ❹ Place the head on the neck and align the bolt holes.  
**TIP!** Look through the nut hole and move neck around until you see daylight to confirm alignment before inserting bolt.
- ❺ Insert the bolt into the circular hole in the neck. Screw the bolt in completely.
- ❻ Put the saddle horn on the saddle and screw on tightly using a Phillips screwdriver. Snap the saddle horn cover on.
- ❼ Thread the saddlebag straps down through the holes closest to the seat, and then up through the holes closest to the outside edge of the saddle. Attach the hook-and-loop tape.

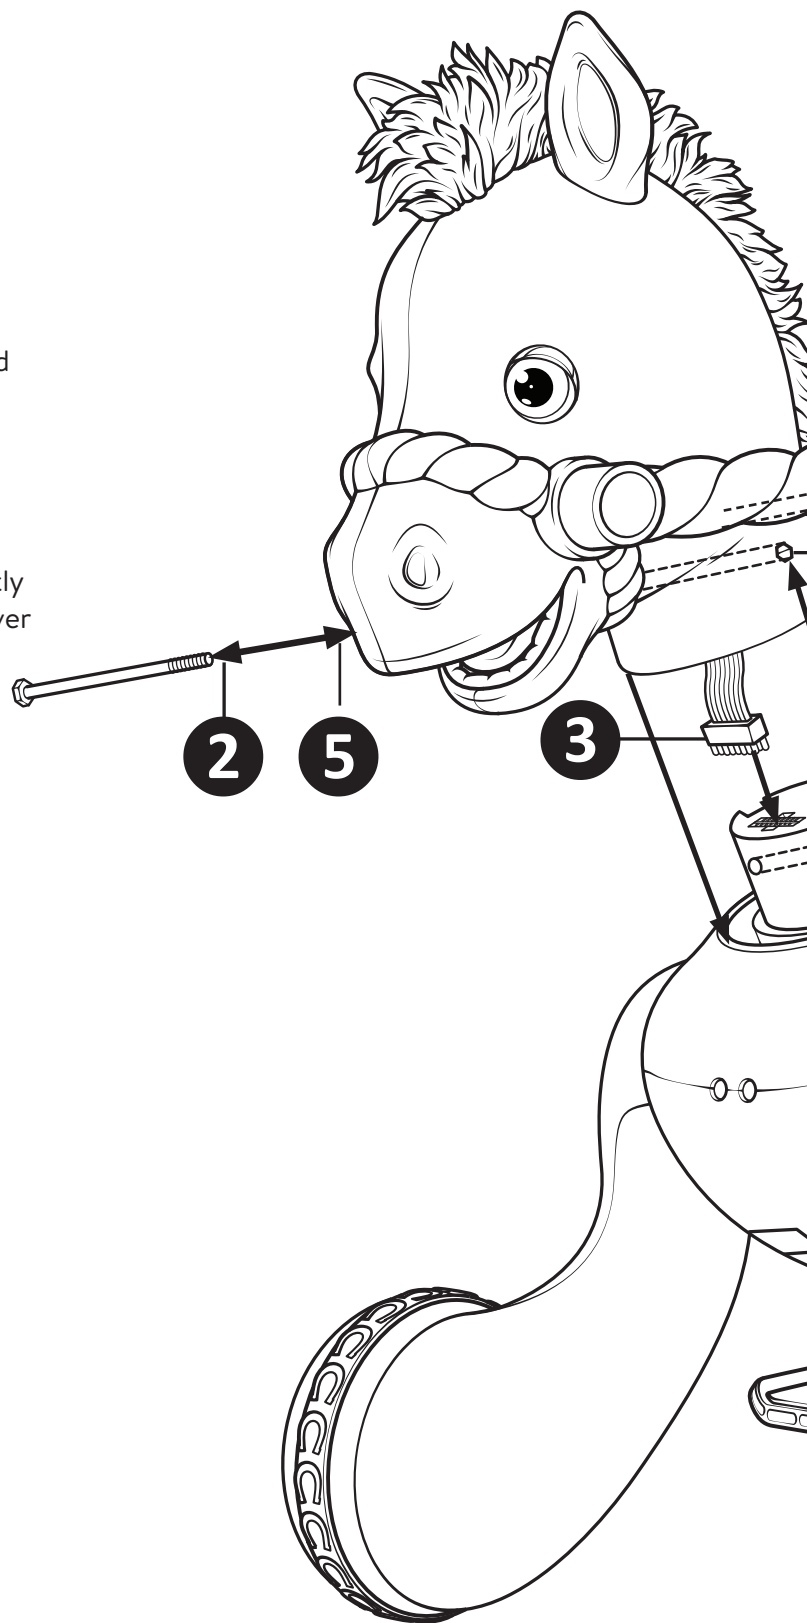

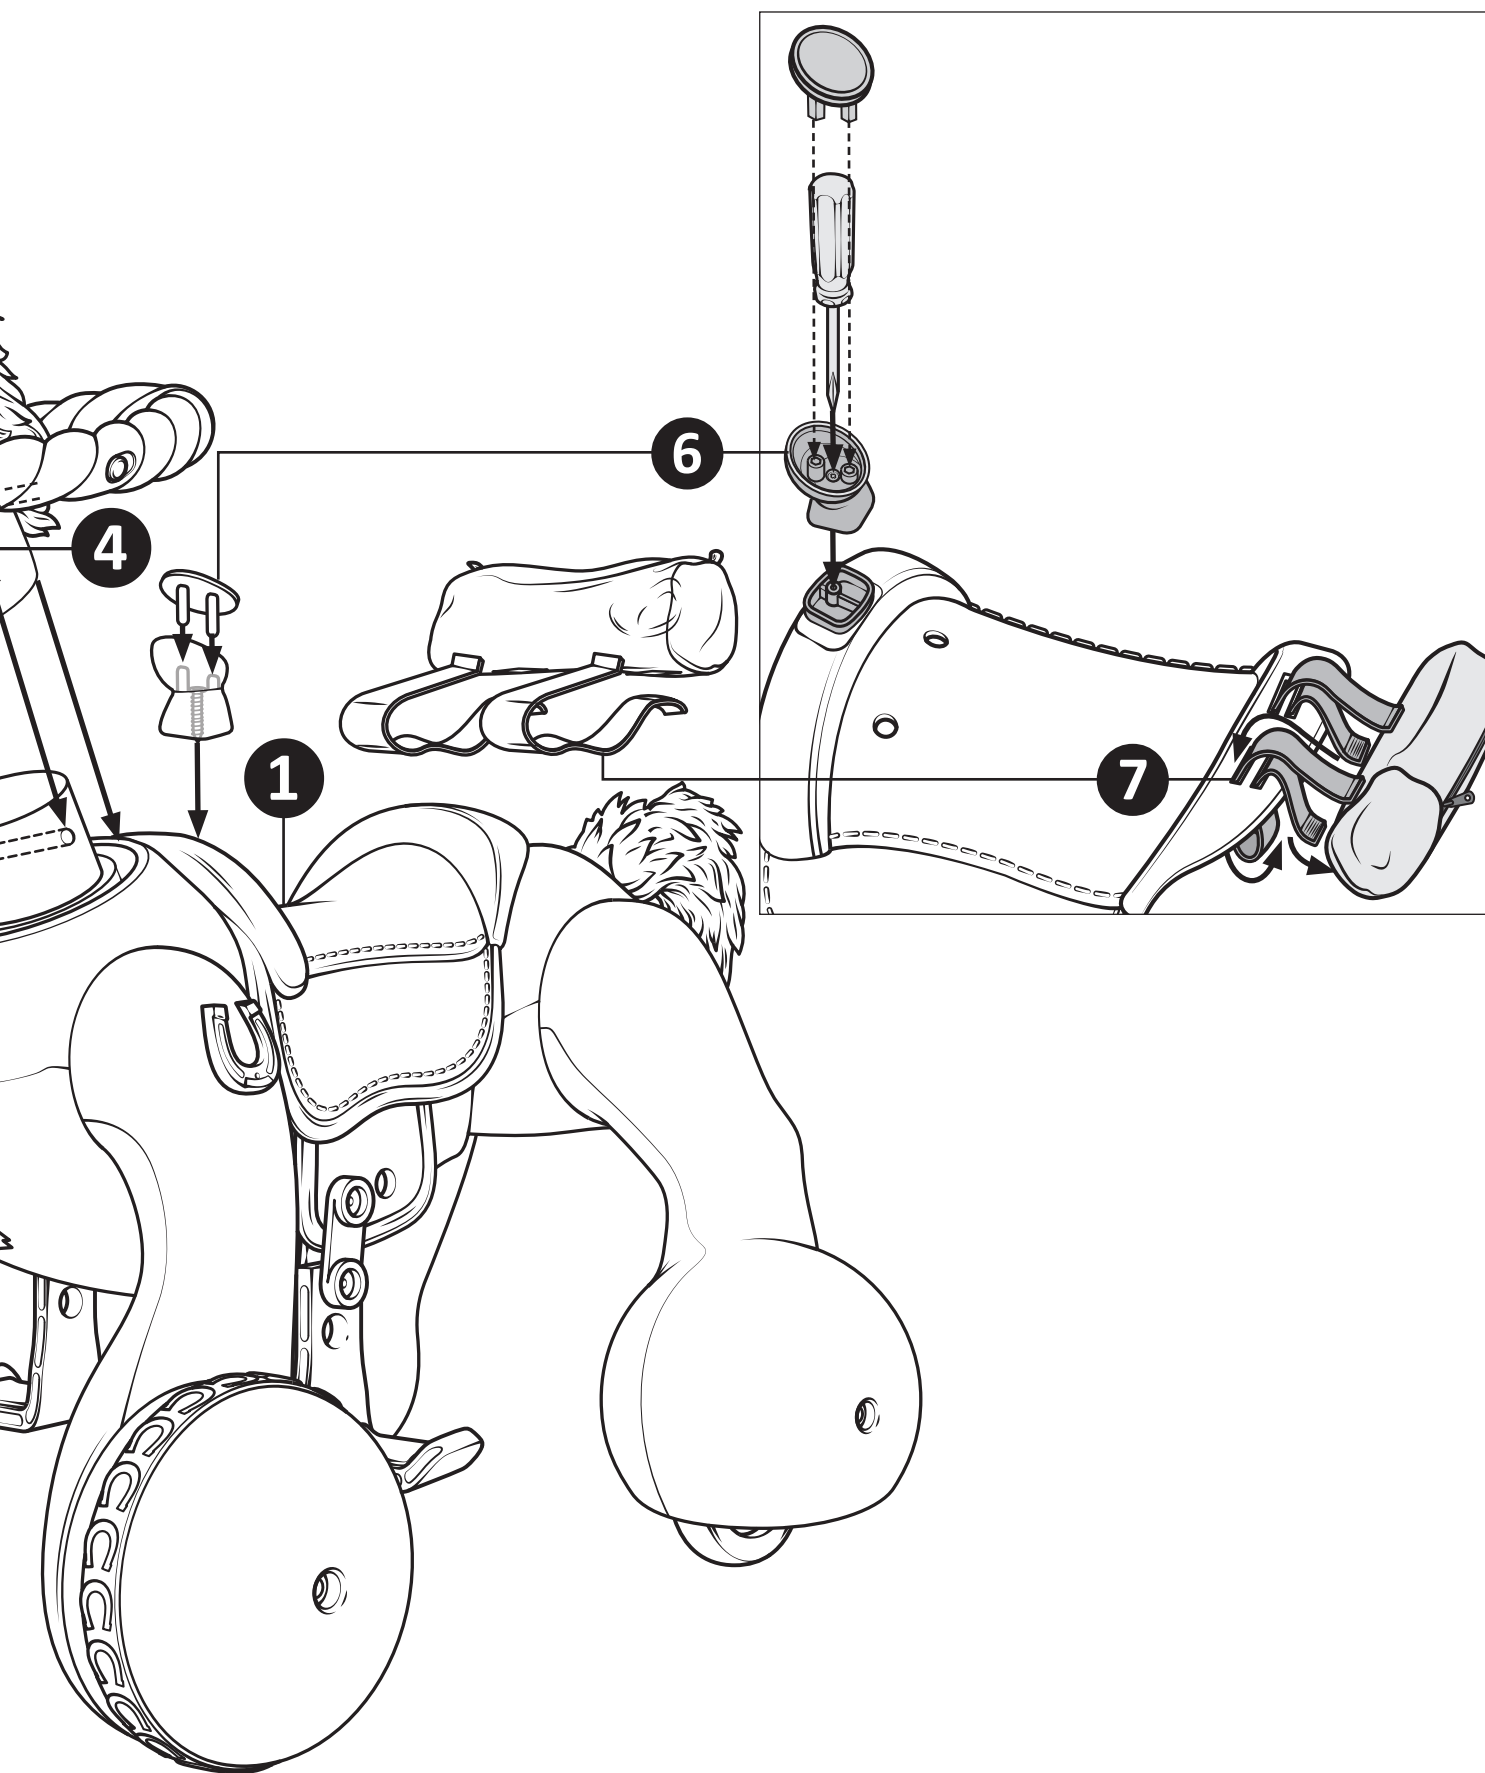



# Use

## ⚠ WARNING

 
- The battery contains hazardous material that may cause serious injury or death if handled, connected, or charged improperly. Only an adult who has read and understands the warnings and instructions in this manual should handle, connect, or charge the battery. Always contact Pacific Cycle at 1-877-741-6154 if you have any questions or concerns regarding handling, connecting, or charging the battery.
- Charging the battery more than 24 hours could cause the battery to explode or ignite resulting in serious injury, death or property damage. Do not charge the battery for more than 24 hours. Always disconnect the product from the charger after the battery is completely charged. Immediately disconnect the charger from the wall after the charger indicator light turns green.
- A damaged supply cord, connector, or charger could cause burns to the skin, an electrical fire, serious injury, death, or property damage. Always inspect the supply cord, connector, and charger for damage. (e.g., frayed or kinked wires, exposed inner wires, missing insulation) before use. If damaged, do not use the supply cord, connector or charger for any purpose and properly dispose.
- Connecting the battery and battery charger to an extension cord(s) could result in overheating, explosion, fire, serious injury, death, or property damage. Never charge the battery using an extension cord. Always plug the charger directly into a wall outlet.
- See additional battery and charging warnings on p.5.

## NOTICE

- The average time to charge the battery is between 10 and 12 hours. Failure to follow the instructions regarding charging the battery may result in permanent damage to the battery and void the warranty.
- The battery may become damaged if allowed to drain completely. Always keep the battery charged.


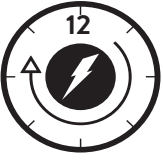 

## Make the One-time Battery Connections

- 1 With a flat head screw driver rotate the screws in the saddle holes one quarter turn to the unlocked position.
- 2 Remove the saddle from the pony.
- 3 Connect the black 3-pin saddle connector to pony.
- 4 Connect the blue battery connectors and push them to the front of the battery compartment to make room for saddle base.
- 5 Place the saddle back onto the pony and rotate the screws in the saddle holes one quarter turn back to the locked position.

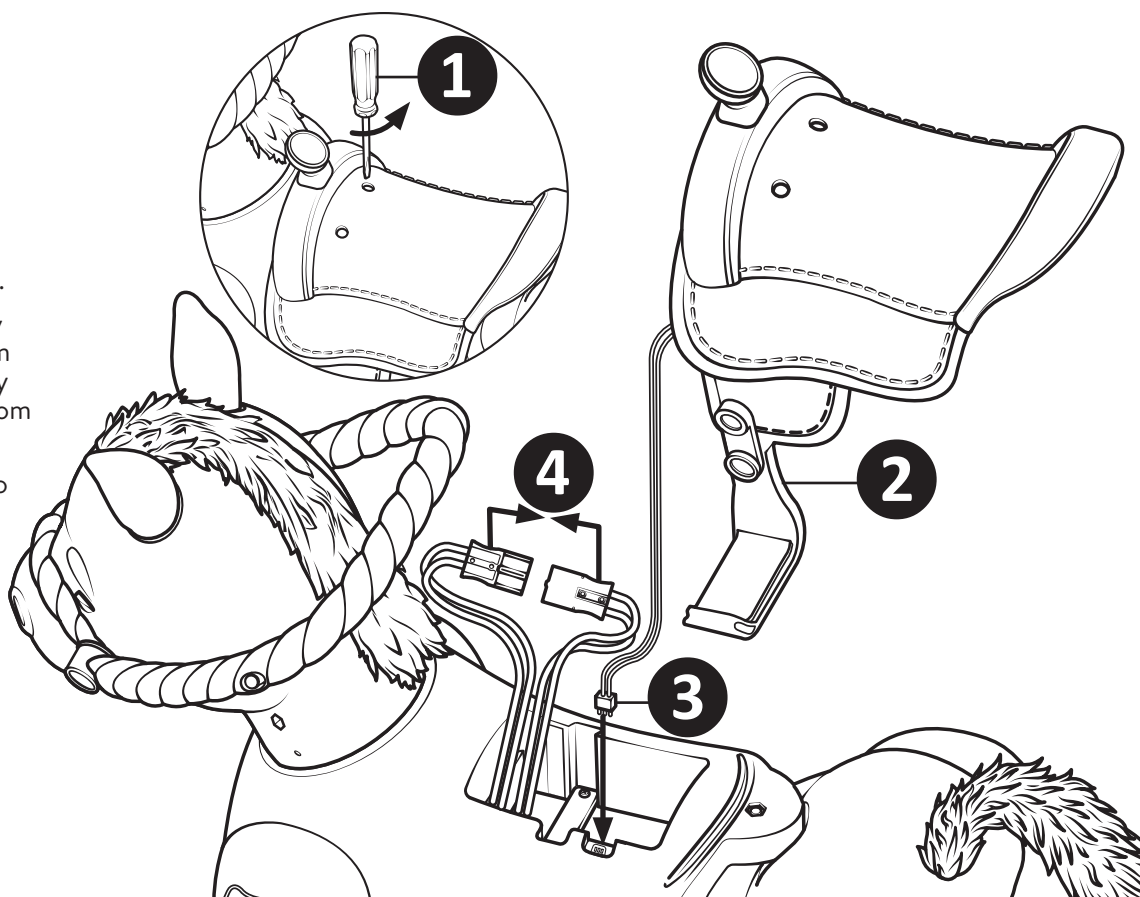




## Charge the Battery

 Charge Times		
		
First charge	Regular charge	No more than



- The product will not turn on while plugged into the charger. Remove from charger prior to turning on.
- Watch for the LED light to turn green to indicate when charging is complete.

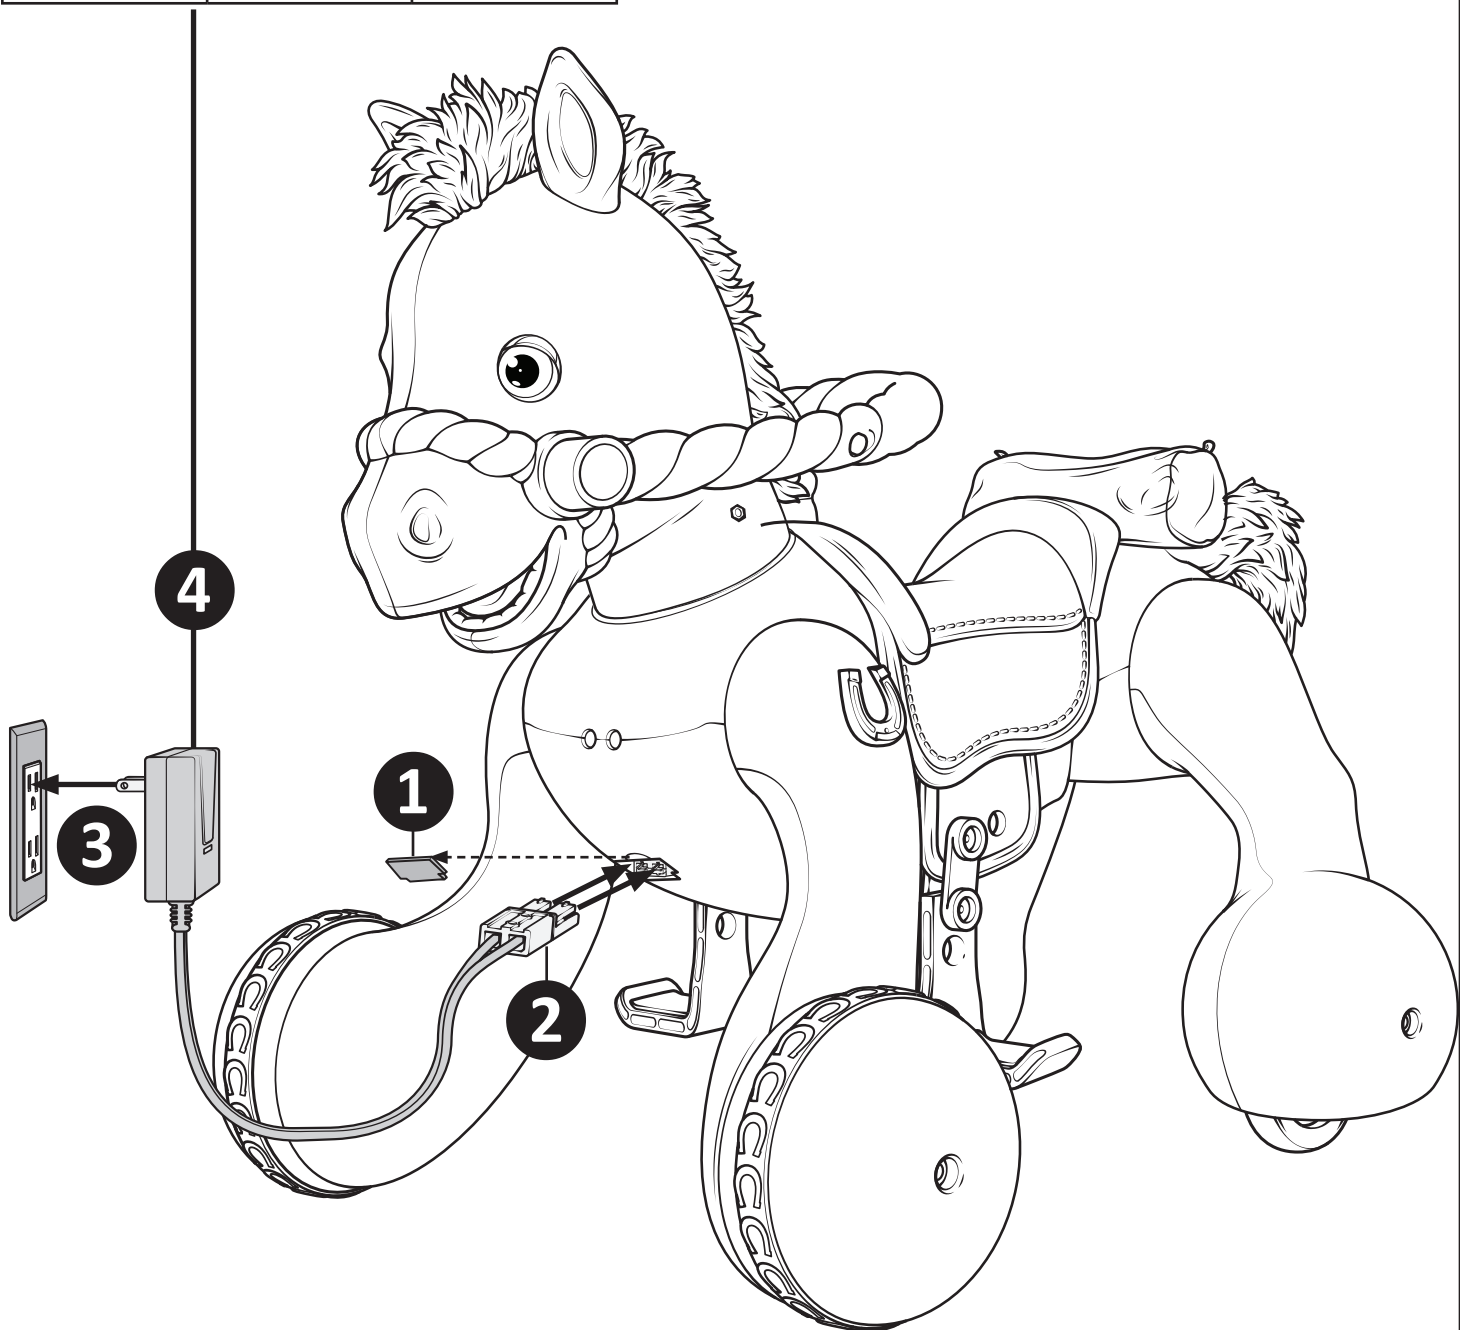

## Button Controls and Functions

### 1 Pony reins:

- Press the reins button to accelerate, release it to stop
- Rotate the reins in front of the pony to walk the pony

### 1 Speed switch:

- Choose between trot (3.5mph), gallop (4mph), and reverse (3.5mph only)

### 1 Power button:

 
- Press to turn the pony on and off
- Fully reset the pony if needed

### 4 Horseshoe button:


- Press and release to begin pony dance; person must stand in front of the pony for the dance to continue
- Press and hold for 2 seconds to mute the horse sounds
- If this button blinks red 5 times, the pony needs to be charged



For additional play details, review the Play Guide that was included with your pony.

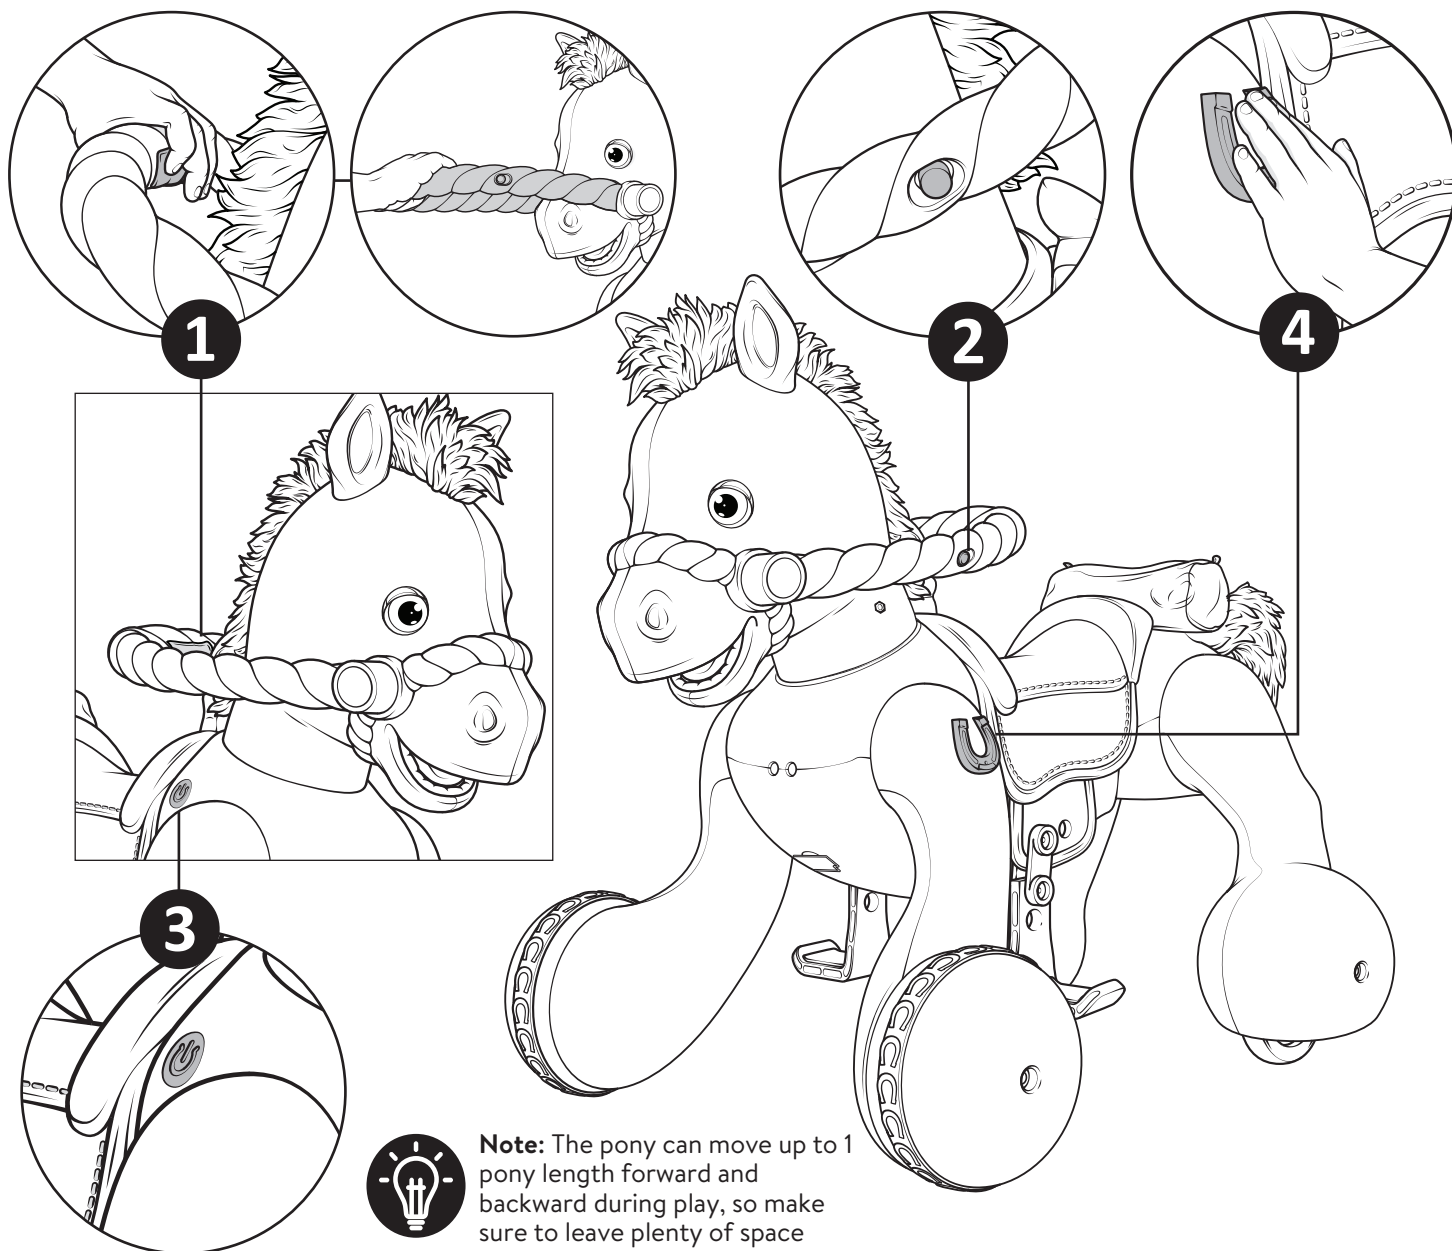

 **Note:** The pony can move up to 1 pony length forward and backward during play, so make sure to leave plenty of space around it.

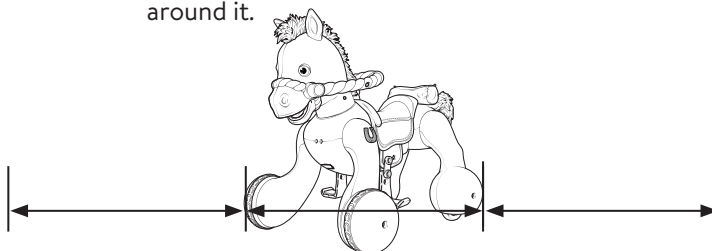

# Maintenance

 
## Battery Replacement and Disposal

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Follow these steps to replace and dispose the battery.

**Important!** Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as an authorized service center or your local automotive battery retailer. Do not throw the battery away with your regular household trash!



**This ride-on toy contains a sealed lead acid NON SPILLABLE BATTERY. This battery must be recycled.**

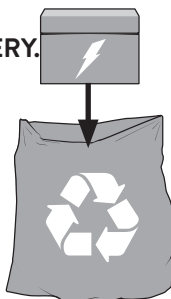

**The ride-on toy should be checked for damage, missing or badly worn parts before each use.**

- Check the tightness of the fasteners before each use.
- Check the tightness of the wheels before each use.
- Ensure the battery is securely in place before each use.
- Store the ride-on toy indoors or cover it with a tarp to protect it from the wet weather. Keep it away from sources of heat, such as stoves and heaters.
- Do not leave the pony in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- Do not wash the pony with a hose.
- Do not wash the vehicle with soap and water.
- Clean the pony with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax, abrasive cleaners or wash the vehicle with soap and water. Water will damage the motor, electrical system and battery.

# Service

Do not return this product to the place of purchase. If your ride-on toy needs service, repairs or replacement parts, call:

**Pacific Cycle Consumer Relations**

**Hours: 8:00 am – 5:00 pm (CST) Monday - Friday**

**Phone: 877-741-6154**

**Email: [customerservice@kidtraxtoys.com](mailto:customerservice@kidtraxtoys.com)**

For a complete list of replacement parts, please contact Pacific Cycle Consumer Relations. To order parts, please have the model and serial number available, which can be found underneath the seat on the battery cover.

## FCC Statement

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Warranty

## One Year Limited Warranty | Six-Month Limited Warranty on Battery

Pacific Cycle, Inc. (PC) warrants this product to the original retail purchaser as follows: The ride-on toy (except for the battery) is warranted against defective materials or workmanship for one year from the date of original purchase. The battery is warranted against defective materials or workmanship for six months from the date of original purchase. An original receipt is required to validate your warranty. PC will, at its option, provide replacement parts or replace this product. PC reserves the right to substitute if the part or model has been discontinued. To make a claim under this warranty you must contact us at [www.kidtraxtoys.com](http://www.kidtraxtoys.com); fax us at 1-800-858-2800, 24 hours a day; write to Kid Trax Consumer Relations Department, Kid Trax Toys, P.O. Box 344 Olney, IL 62450 or call 1-877-741-6154 from 8 a.m. to 5 p.m., Monday through Friday, CST. Proof of purchase is required, and shipping charges are the responsibility of the consumer.

## Warranty Limitations

This warranty does not include damages which arise from accident, misuse, abuse, neglect or other causes not arising out of defects in materials or workmanship, nor does it cover damages arising out of service by other than an authorized PC service center. For personal use only. Not for commercial use. The original owner shall pay all labor charges connected with the repair or replacement of all parts. Under no circumstances does this limited warranty include the cost of shipment or transportation to or from an authorized repair center or Kid Trax retailer.

## Limitation of Damages

The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will PC or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product. Some states do not allow limitations as the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

## Limitations of Warranties and Warranty Terms

Any warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Neither PC nor the dealer selling this product authorized any person to create for it any other warranty, obligation or liability in connection with this product.

### Pacific Cycle Consumer Relations

**Hours:** 8:00 am – 5:00 pm (CST) Monday - Friday

**Phone:** 877-741-6154

**Email:** [customerservice@kidtraxtoys.com](mailto:customerservice@kidtraxtoys.com)



**neptune**✓

© 2018 Neptune BSC LLC.  
1617 Bent Oak CT.  
Kissimmee, FL 34744