

PRESCHOOL PRINCESS CARRIAGE

THIS MANUAL CONTAINS IMPORTANT SAFETY, PERFORMANCE AND MAINTENANCE INFORMATION. READ THE MANUAL BEFORE TAKING YOUR FIRST RIDE OR ALLOWING YOUR CHILD TO RIDE YOUR NON-ELECTRIC RIDE-ON TOY. KEEP THE MANUAL HANDY FOR FUTURE REFERENCE.





DO NOT return this item to the store.
QUESTIONS OR COMMENTS?
1-800-551-0032

FOR AGES 18 MONTHS - 5 YEARS MAXIMUM WEIGHT: 50 lb (22 kg)

NOTE: Illustrations in this Manual are for reference purposes only and may not reflect the exact appearance of the actual product. Specifications are subject to change without notice.

TABLE OF CONTENTS

A	Introduction, Safety and Warnings	. 3
В	Assembly	. 7
C	Maintenance	. 11
D	Registration	13
Ε	Warranty	15

INTRODUCTION, SAFETY AND WARNINGS

ABOUT THIS MANUAL: This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new non-electric ride-on toy. It is important for you to understand your new non-electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new non-electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

GENERAL WARNING: Riding a non-electric ride-on toy can be a dangerous activity, even under the best of circumstances. Proper maintenance of your new ride-on toy is your responsibility and helps reduce the risk of injury. Certain conditions may cause components to fail without fault of the manufacturer. The ride-on toy can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such a thing does occur, your child can become seriously injured or die, even when using safety equipment and other safety precautions.

WARNING: To reduce risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one (1) rider.

WARNING: CHOKING HAZARD. MAY CONTAIN SMALL PARTS IN UNASSEMBLED STATE.

RIDE AT YOUR OWN RISK AND ALWAYS USE COMMON SENSE.

This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain or properly use your non-electric ride-on toy. Because any fall can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual or the risk of falling leads to a warning.

ALWAYS USE PROPER RIDING ATTIRE.

Always wear appropriate clothing and shoes, including lace-up or similar shoes with rubber soles. Never ride barefoot or in sandals and make sure that shoelaces or other fasteners are tied and kept away from the wheels and moving parts of the ride-on toy.

RIDER USE AND REQUIRED PARENTAL SUPERVISION

RIDERS MUST NOT EXCEED THE WEIGHT LIMIT OF 50 pounds (22 kg) and MUST BE OVER 18 MONTHS OLD.

The age grade for the non-electric ride-on toy is for ages 18 months – 5 years. Just because your child is within the age and weight limitations specified for the non-electric ride-on toy, does not mean that his/her size is appropriate to fit or maintain control of the non-electric ride-on toy, or that he/she is capable of safely operating the non-electric ride-on toy. You are the best judge of whether you or your child can safely operate the non-electric ride-on toy; this includes determining whether your child is at the appropriate developmental stage for safe use of the non-electric ride-on toy. Any rider that is unable to fit comfortably on the non-electric ride-on toy should never attempt to ride it. A parent's decision to allow their child to use the non-electric ride-on toy should be based on the child's maturity, skill and their ability to follow rules. Remember that the non-electric ride-on toy is intended for use only by children who are, at a minimum, able to comfortably and safely operate it.

Children operating the non-electric ride-on toy should be supervised by an adult at all times. Parents should ensure that children only use the non-electric ride-on toy safely and within their age and physical limits.

This manual contains very important safety information. It is your responsibility to completely review this information and make sure that all riders understand all of the warnings, cautions, instructions and safety topics addressed in this manual and to assure that all riders are able to safely and responsibly use the non-electric ride-on toy. You should periodically review and reinforce all information in this manual with all riders, especially children. You should also regularly inspect and maintain your non-electric ride-on toy to ensure the safety of all riders. Make sure that your new non-electric ride-on toy is properly fitted to any child riding it; that it is in good repair and safe operating condition; that you and your child have gone over the use, operation and safety information in this manual; that you and your child have learned and understand what to do and what not to do with your new non-electric ride-on toy, including observing all applicable laws, rules and common sense.

Children should be made aware of all possible riding hazards and correct riding behavior before they ride the non-electric ride-on toy and should be supervised by an adult at all times. Please explain the following to them as often as necessary.

SAFE RIDING PRACTICES AND WARNINGS

- Check and obey all local laws or regulations which may be in effect in the locations where the non-electric ride-on toy may be used.
- Always wear appropriate clothing and shoes.
- Observe the age and weight limitations on the cover of this manual.
- Always stay seated while riding the non-electric ride-on toy.
- Children must be supervised by an adult at all times to be safe.
- Always be alert and ride your non-electric ride-on toy defensively. Watch out
 for obstacles that could catch one of the non-electric ride-on toy's wheels or
 force you to turn suddenly and/or lose control. Be careful to avoid pedestrians,
 persons using other wheeled products (including roller or in-line skates,
 skateboards, scooters, bikes, etc.), children or animals who may enter your path.
 Always respect the rights and property of others.
- Do not attempt or perform any stunts or tricks on the non-electric ride-on toy. It
 is not made to withstand such misuse and abuse.
- Never allow more than one person to ride the non-electric ride-on toy at one time and never try to tow anything.
- Do not use near steps, water, or swimming pools.
- Do not ride in wet weather.
- Keep your fingers and other body parts away from the wheels and all other moving components.
- Never hitch onto another vehicle or let yourself be pulled or pull anyone or anything while riding the non-electric ride-on toy.
- Ride only on smooth, flat, dry surfaces such as pavement or level ground without loose debris, such as sand, leaves, rocks or gravel. Water, mud, ice, bumpy, un-even, slick, or rough surfaces could impair traction and contribute to possible loss of control.
- Do not ride on or near hills or steep inclines. Ride only on level ground to avoid tip over.
- Avoid sharp turns, bumps, drainage grates, and other obstacles.
- Do not ride at night or where there is limited visibility.
- Do not ride indoors or on surfaces that could become damaged such as carpet or flooring.
- Do not ride on streets, around cars, or in foot or vehicle traffic.
- Regularly check the non-electric ride-on toy and its components. If any parts are broken or worn, do not ride the non-electric ride-on toy until you have fixed or replaced the broken or worn parts.

▲ WARNING: ADULT ASSEMBLY REQUIRED.

- Do not to allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with wheels or other moving parts.
- Before each cycle of operation, you must perform the pre-operation checks specified in this manual, including:
 - that the area that the unit is to be operated in is safe and suitable for safe operation;
 - that all safety labels are in place and understood by everyone, including the riders:
 - that tires/wheels are in good condition;
 - and that no parts are broken or worn.
- Avoid sharp bumps, drainage grates, and sudden surface changes.

PRE-RIDE SAFETY CHECKLIST

- Check to make sure that all parts and components are properly secured and are functioning according to the manufacturer's specifications.
- Components must be maintained and repaired and only with the manufacturer's authorized replacement parts. Installation should be performed only by adult, qualified personnel.

WARNING: FAILURE TO HEED THE WARNINGS LISTED ABOVE INCREASES RISK OF POTENTIALLY SERIOUS INJURY. USE APPROPRIATE CAUTION WHEN RIDING AND ALWAYS WEAR APPROPRIATE CLOTHING AND SHOES.

▲ WARNING: DO NOT USE NON-ORIGINAL OR NON-RECOMMENDED PRODUCTS WITH YOUR NON-ELECTRIC RIDE-ON TOY.

Altering of the original components or use of non-recommended replacement parts may or may not be compatible with the design and will void the warranty and may cause an unsafe condition resulting in serious injury or death.

If you experience a problem with this product, or are missing a part, please call us at **1-800-551-0032**, rather than return this product to the store.

Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.

ASSEMBLY

Your new vehicle requires adult assembly. Please set aside around 20 minutes for assembly. Please identify all parts before assembly and save all packaging material until assembly is completed to ensure that no parts are discarded.

TOOLS REQUIRED:



Phillips Screwdriver (not included)




Type A - Dia 4mm x 20mm x 8pcs




Type B - Dia 4mm x 38mm x 1pcs

WARNING: THE NON-ELECTRIC RIDE-ON IS TO BE ASSEMBLED BY AN ADULT. As shipped in the box it is partially assembled and contains potentially hazardous sharp edges and points on screws in the unassembled state. The box contains a package of small parts, cap nuts and fasteners that pose a choking hazard to small children. Assemble the non-electric ride-on without your child's help and keep these hazards away from your child until assembly is complete.

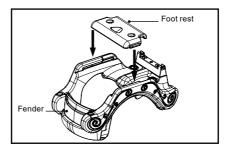


1. FOOT REST AND FENDER


- Turn car body upside down.
- Insert foot rest into bottom of seat and snap into place.
- Ensure that foot rest is completely seated.

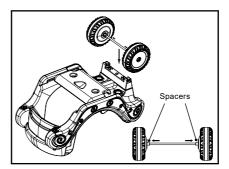



2. REAR WHEELS

- Insert rear wheel assembly into axle guides, push two spacers onto both ends, and snap axle into place.
- Ensure that rear wheel assembly are completely seated.

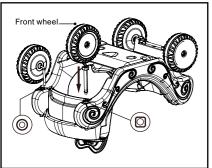

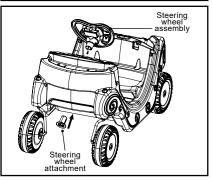

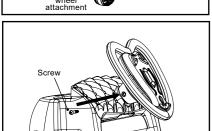

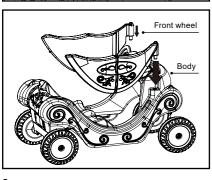

3. FRONT WHEELS

- Note different shapes of wheel pegs and corresponding slots on vehicle body.
- Insert one front wheel assembly into correct slot on body, and snap into place.
- Repeat for other side, and ensure that front wheels are completely seated.

4. STEERING WHEEL

- Turn car over to upright position.
- Slide steering wheel assembly and attachment into slot on dashboard.

 Tighten screw with nut (Type B - Dia. 4mm x 38mm x 1pcs) with Philips screwdriver.

CAUTION: Overtightening screws may result in damage.

5. DOORS

- Insert doors tabs into sloots on car body.
- Ensure that door assemblies are completely seated.


6. ROOF

 Place roof into position on front window and rear window assemblies. (See below graphic)
 Front

 Front

Tighten six screws
 (Type A - Dia. 4mm x
 20mm x 8pcs) with
 Phillips screwdriver.




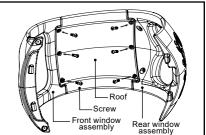

CAUTION: Overtightening screws may result in damage.

7. FRONT WINDOW

 Insert front window assembly tabs into slots on car body.

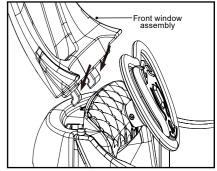

8. REAR WINDOW

- Insert rear window assembly tabs into slots on car body.
- Tighten two screws (Type A Dia. 4mm x 20mm x 8pcs) with Phillips screwdriver.


A CAUTION: Overtightening screws may result in damage.


Rear window assembly

10. BACK SEAT

- Slide seat back assembly into slot on car body.
- Tighten two seat back attachments from bottom.


CAUTION: Overtightening screw may result in damage.

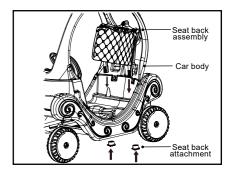

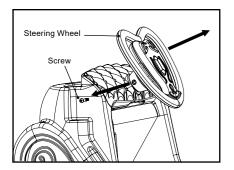

BATTERY INSTALLATION

 Remove screw with nut (Type B - Dia. 4mm x 38mm x 1pcs) with Philips screwdriver and pull out steering wheel.

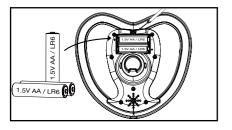

- Remove screw from battery cover with Phillips screwdriver.
- Replace batteries, paying attention to battery polarity as indicated.
- Replace battery cover and tighten screw with Phillips screwdriver.

NOTE:

- Use insulated long-nose pliers or small flat head screwdriver when removing batteries to prevent damage to battery compartment.
- Ensure the battery compartment is not damaged after replacing the batteries.
- Make sure the battery cover is securely fastened once you are done replacing the batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries.

CAUTION: Batteries used with this product should be kept away from children who still put things in their mouths. If swallowed, immediately see a doctor and have the doctor call (202) 625-3333 collect. If you reside outside the US, have the doctor call your local poison control center.

WARNING: Please keep batteries out of reach of children. Batteries and screws also present a hazard to young children. Removal of the battery cover and replacement of batteries should be performed by an adult without children present.

MAINTENANCE

BEFORE EACH RIDE

Before each ride, check your non-electric ride-on and its components against the following checklist. In addition, if you have a crash or accident, even a minor one, always inspect the non-electric ride-on toy thoroughly before riding again.

- · Check that wheels are straight.
- Check attachment of wheels.
- Inspect your wheel for wear or damage.
- Check the wheels to see if they can spin smoothly.
- Check to make sure that there are no broken or worn parts and that the foot to floor ride on toy is operating smoothly.

WARNING: A non-electric ride-on that does not work properly can cause you to lose control and fall. Inspect the entire non-electric ride-on thoroughly before every ride and do not ride it until any problem has been corrected.

- Periodically inspect the non-electric ride-on for wear or damage.
- To clean the non-electric ride-on, use a mild soap and water solution and clean cloth.
- Rinse clean with water to remove soap residue.
- · Replace worn parts.

IMPORTANT

- Do not let any child touch the wheels or be near them when the ride-on vehicle is moving.
- To avoid accidents, please inspect the vehicle before riding to ensure that it is in proper working order and safe to ride.
- Check all the screws, cap nuts and protective coverings regularly and tighten as required. Check plastic parts on a regular basis for cracks or broken pieces.

D

SAFETY PRECAUTIONS

- Children must have adult supervision at all times.
- Do not ride on the road, footpaths, near pools, or bodies of water.
- Do not allow children under the recommended age to ride the vehicle; please refer to the age grading.
- Do not allow riders over the recommended weight rating or age grading to use the vehicle.
- An adult must teach the child how to operate the vehicle.
- Do not ride on hills or slopes, in sand or on other soft, wet, or slippery surfaces.
- The vehicle is designed to carry only one rider at a time. Never allow more than one rider or over-load the vehicle.

This product should be assembled and checked by adults before use.

MAINTAINING YOUR VEHICLE

Occasionally use a lightweight oil to lubricate moving parts such as wheels and the steering linkages.

Park the vehicle indoors or cover it with a tarp to protect it from wet weather.

Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.

DO NOT wash the vehicle with a hose. **DO NOT** wash the vehicle with soap and water.

Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non wax furniture polish. **DO NOT** use car wax. **DO NOT** use abrasive cleaners, or cleaners that contain ammonia or isopropyl alcohol.

REGISTRATION

REGISTER YOUR NON-ELECTRIC RIDE-ON TOY PURCHASE ONLINE AT

www.dynacraftwheels.com

REGISTRATION

Model number or description:			
Serial Number:			
Name:			
Address:			
City:			
only.			
State:	Zip:		
E-mail Address:			
Date of purchase:	User's date of birth:		
Date of birth or person whose name appears above:			
Place of purchase:			

LIMITED WARRANTY

Subject to the following limitations, all non-electric ride-on toys manufactured for Dynacraft are warranted to the original purchaser to be free of defects in materials and workmanship for a period of one year from the date of purchase.

No other express or implied warranty is given. Dynacraft will replace without charge those component parts that are determined by Dynacraft to be defective in materials or manufacture under normal use and service during the warranty period. The original purchaser will be responsible for any and all labor charges connected with the repair or replacement of component parts.

This Limited Warranty does not apply to normal wear and tear, such as to wheels/ tires, or other components that wear with use, nor to claimed defects, malfunctions, or failures that result from abuse, neglect, improper assembly, improper maintenance, lack of maintenance, improper storage alteration, modification, collision, crash, or misuse of the Dynacraft non-electric ride-on toys.

Dynacraft does not encourage stunting, trick riding, ramp riding, jumping, aggressive riding, riding on severe terrain, riding in severe climates, riding with heavy loads, commercial activities, or other similar activities; such use is inherently dangerous, can cause serious injury to the rider, and if done, it is with the rider and/or the rider's parent's express and implied assumption of the risk of such use, and Dynacraft shall not have any responsibility for any resulting break down of the ride-on toy or its components, or for any rider injuries that occur during such use.

Riding a non-electric ride-on toy can be inherently dangerous such that bodily injury or even death can occur, especially if the rider and/or the rider's parent does not perform the safety and maintenance checks recommended in this manual, if the rider does not follow all applicable laws and rules, if the rider goes into traffic, rides double, or engages in aggressive, stunt or extreme terrain riding. Parents that allow their children to ride taking such actions will assume their own risk and the risk of injury to their children, and Dynacraft will not be responsible.

THE PURCHASE OF THIS NON-ELECTRIC RIDE-ON TOY WILL CONFIRM THE BUYER'S AGREEMENT THAT DYNACRAFT'S LIABILITY UNDER THIS WARRANTY SHALL BE NO GREATER THAN THE AMOUNT OF THE ORIGINAL PURCHASE PRICE AND IN NO EVENT SHALL DYNACRAFT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This Limited Warranty will be void if the product is ever:

- used in a manner other than for recreation or play
- modified in anyway
- used as a rental

Dynacraft does not offer an extended warranty; if you have purchased an extended warranty, it must be honored by the store from which you purchased the ride-on toy or the appropriate party. For your records, keep your original sales receipt with this manual.

Dynacraft Customer Service

1-800-551-0032

7AM to 4PM Pacific Standard Time



DO NOT return this item to the store. Please call Dynacraft for assistance.

Please have the following information available when you call:

Model Number: (sample: 8802-33) Production Date: (sample: 03.03.2015) Serial Number: (sample: DA0233HD00001)

Having this information will be required and helps us handle your call more effectively.



Dynacraft BSC, Inc.
89 S. Kelly Rd., American Canyon, CA 94503
Call Toll Free 1-800-551-0032
Monday – Friday 7AM to 4PM PST
www.dynacraftwheels.com
©2017 All rights reserved