


# JoJo Siwa™ pedal operated 4x4 ride-on Owner's Manual

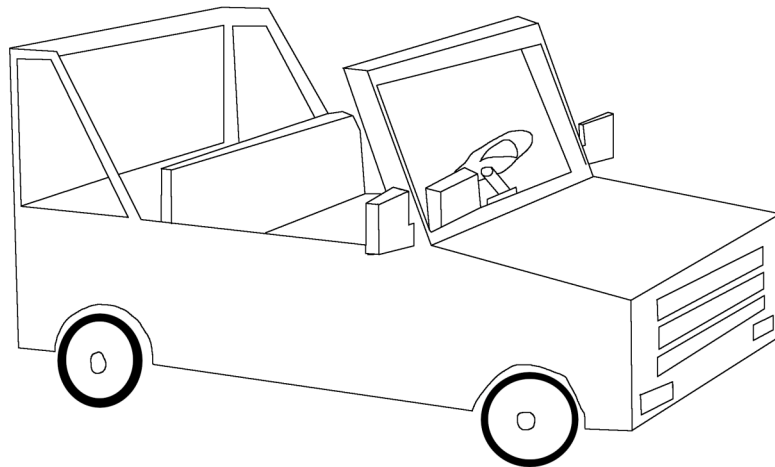

# Table of contents

1. Warnings	2
2. How to use the vehicle properly	6
3. Maintenance	7
4 Troubleshooting	9
5 Notes	10

# Warnings

WARNING: To reduce risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than two (2) riders.

WARNING: CHOKING HAZARD-Small parts not suitable for children under 3 years old.

RIDE AT YOUR OWN RISK AND ALWAYS USE COMMON SENSE.

This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain or properly use your pedal ride-on toy. Because any fall can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual or the risk of falling leads to a warning.

ALWAYS USE PROPER RIDING ATTIRE.

Always wear appropriate clothing and shoes. Never ride barefoot or in sandals and make sure that shoelaces or other fasteners are tied and kept away from the wheels and drive system of the ride-on toy.

STORAGE.

Store your vehicle indoors when not in use to avoid long time exposure to the sun or rain.

## RIDER USE AND REQUIRED PARENTAL SUPERVISION

RIDERS MUST NOT EXCEED THE WEIGHT LIMIT OF 130 POUNDS (59 KG) AND MUST BE OVER 3 YEARS OLD. NEVER ALLOW MORE THAN 2 CHILDREN TO RIDE THE VEHICLE SIMULTANEOUSLY.

The age grade for the pedal ride-on toy is for 3 years and older. Just because your child is within the age and weight limitations specified for the pedal ride-on toy, does not mean that his/her size is appropriate to fit or maintain control of the pedal ride-on toy, or that he/she is capable of safely operating the pedal ride-on toy. You are the best judge of whether you or your child can safely operate the pedal ride-on toy; this includes determining whether your child is at the appropriate developmental stage for safe use of the pedal ride-on toy. Any rider that is unable to fit comfortably on the pedal ride-on toy should never attempt to ride it. A parent's decision to allow their child to use the pedal ride-on toy should be based on the child's maturity, skill and their ability to follow rules. Remember that the pedal ride-on toy is intended for use only by children who are, at a minimum, able to comfortably and safely operate it.

Children operating the pedal ride-on toy should be supervised by an adult at all times. Parents should ensure that children only use the pedal ride-on toy safely and within their age and physical limits.

This manual contains very important safety information. It is your responsibility to completely review this information and make sure that all riders understand all of the warnings, cautions, instructions and safety topics addressed in this manual and to assure that all riders are able to safely and responsibly use the pedal ride-on toy. You should periodically review and reinforce all information in this manual with all riders, especially children. You should also regularly inspect and maintain your pedal ride-on toy to ensure the safety of all riders. Make sure that your new pedal ride-on toy is properly fitted to any child riding it; that it is in good repair and safe operating condition; that you and your child have gone over the use, operation and safety information in this manual; that you and your child have learned and understand what to do and what not to do with your new pedal ride-on toy, including observing all applicable laws, rules and common sense.

Children should be made aware of all possible riding hazards and correct riding behavior before they ride the pedal ride-on toy and should be supervised by an adult at all times. Please explain the following to them as often as necessary.

## SAFE RIDING PRACTICES AND WARNINGS

- Check and obey all local laws or regulations which may be in effect in the locations where the pedal ride-on toy may be used.
- Always wear appropriate clothing and shoes.
- Observe the age and weight limitations on the cover of this manual.
- Always stay seated while riding the pedal ride-on toy.
- Children must be supervised by an adult at all times to be safe.
- Always be alert and ride your pedal ride-on toy defensively. Watch out for obstacles that could catch one of the pedal ride-on toy's wheels or force you to turn suddenly and/or lose control. Be careful to avoid pedestrians, persons using other wheeled products (including roller or in-line skates, skateboards, scooters, bikes, etc.), children or animals who may enter your path. Always respect the rights and property of others.
  - Keep both hands on the steering wheel at all times.
  - Never allow more than two persons to ride the pedal ride-on toy at one time and never try to tow anything.
  - Do not use near steps, water, or swimming pools.
  - Do not ride in wet weather.
  - Keep your fingers and other body parts away from the steering system, wheels and all other moving components.
- Never hitch onto another vehicle or let yourself be pulled or pull anyone or anything while riding the pedal ride-on toy.
- Ride only on smooth, flat, dry surfaces such as pavement or level ground without loose debris, such as sand, leaves, rocks or gravel. Water, mud, ice, bumpy, un-even, slick, or rough surfaces could impair traction and contribute to possible loss of control.
- Do not ride on or near hills or steep inclines. Ride only on level ground to avoid tip over.
- Avoid sharp turns, bumps, drainage grates, and other obstacles.
- Do not ride at night or where there is limited visibility.
- Do not ride indoors or on surfaces that could become damaged such as carpet or flooring.
- Do not ride on streets, around cars, or in foot or vehicle traffic.

- Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with wheels or other moving parts.
- Before each cycle of operation, you must perform the pre operation checks specified in this manual or by the manufacturer, including:
  - That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition;
  - That the area that the unit is to be operated in is safe and suitable for safe operation; and
  - That all safety labels are in place and understood by everyone, including the riders.

## **PRE-RIDE SAFETY CHECKLIST**

- Check to make sure that all components are properly secured and are functioning according to the manufacturer's specifications.
- Components must be maintained and repaired and only with the manufacturer's authorized replacement parts. Installation should be performed only by adult, qualified personnel.

# How to use the vehicle properly

## PEDAL

- To move the car, pedal like you do on a bike.

## Opening the door

To open the doors, Move it forward towards you

## SAFETY PRECAUTIONS


- The child must have adult supervision at all times.
- Do not ride on the road, footpaths, near pools, or bodies of water.
- Do not allow children under the recommended age to ride the vehicle; refer to the age grading.
- Do not allow riders over the recommended weight rating or under the age grading to use the vehicle.
- An adult must teach the child how to operate the vehicle.
- Do not ride on hills or slopes, in sand or on other soft, wet, or slippery surfaces.
- The vehicle is designed to carry only a maximum weight of 130 lbs at a time.

Never allow more than two riders or over-load the vehicle.

- This product should be assembled and checked by adults before use.

# Maintenance


Tools required:




Phillips Screwdriver



17mm Socket Wrench



Flat head Screwdriver

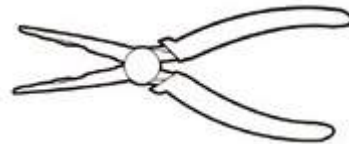

Needle-Nose Pliers

## How to replace wheel

1. Remove the axle cap by sliding a flat head screwdriver along the edge of the cap and carefully pry the cap open.
2. Use needle nose pliers to remove the split pin in the hole of the front axle end.
3. Remove the M10 locknut with a 17mm socket wrench.
4. Remove the Ø12 washer.
5. Remove the wheel, then replace with a new wheel.
6. Remount the Ø12 washer and M10 locknut and securely tighten the wheel.
7. Reinsert the axle cap.

NOTE: Do not over-tighten.



# MAINTAINING YOUR VEHICLE

Occasionally use a lightweight oil to lubricate moving parts, such as wheels and the steering linkages.

Park the vehicle indoors or cover it with a tarp to protect it from wet weather.

Keep the vehicle away from sources of heat, such as stoves and heaters. DO NOT wash the vehicle with a hose. DO NOT wash the vehicle with soap and water.

DO NOT drive the vehicle in rainy or snowy weather.

Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non wax furniture polish. DO NOT use car wax. DO NOT use abrasive cleaners, or cleaners that contain ammonia or isopropyl alcohol.

DO NOT drive the vehicle in loose dirt, sand or fine gravel, which could damage moving parts.

# Troubleshooting

Problem	Possible cause	Solution
Vehicle does not run	Pedal bar damage	Replace damaged pedal bar
	Worn or damaged pedal	Replace with new pedal
Vehicle runs sluggishly	Vehicle is overloaded	Make sure you do not overload the vehicle by allowing more than two riders at one time, exceeding the 130 lbs. maximum weight capacity, or by towing objects behind the vehicle.
	Driving conditions too stressful	Use only on level ground.

Notes:

Copyright 2019 Viacom International Inc All rights reserved.

Nickelodeon and all related titles and logos are trademarks of  
Viacom International Inc.

JoJo Siwa is a registered trademark of JoJo Siwa entertainment LLC