




# Disney PRINCESS

## 24 V ELECTRIC PRINCESS CARRIAGE

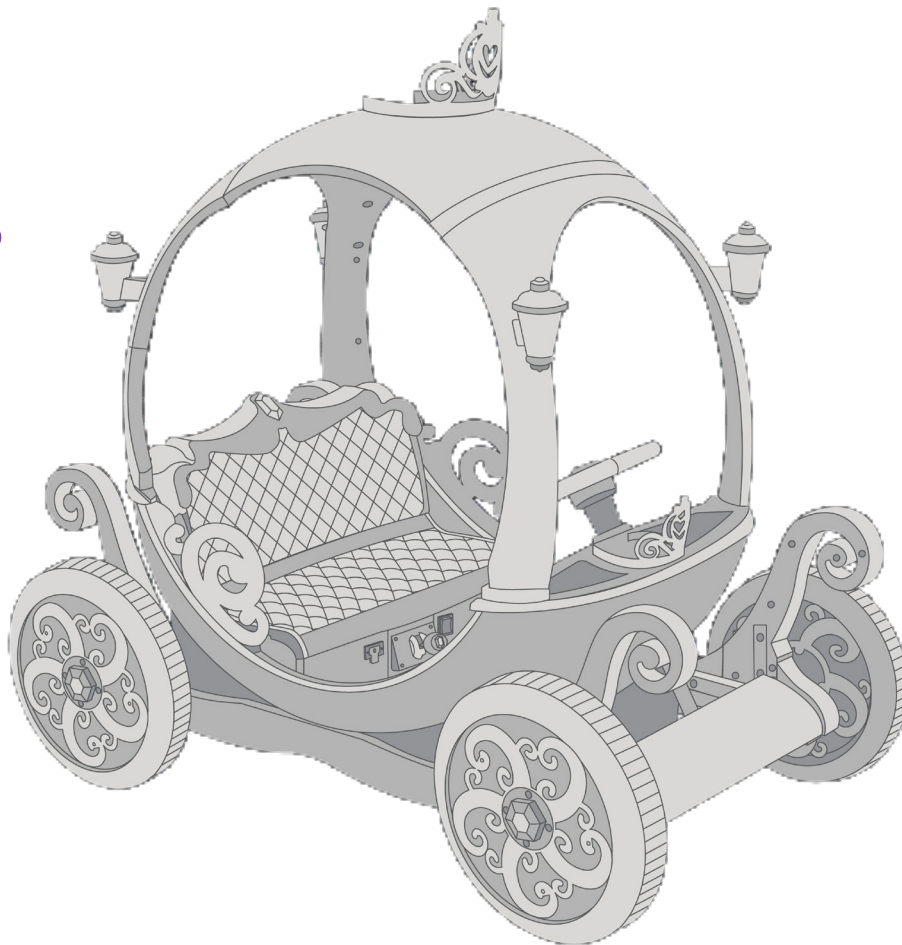

**NOTE:** Illustrations in this manual are for reference purposes only and may not reflect the exact appearance of the actual product. Specifications are subject to change without notice. This manual contains important safety, performance and maintenance information. Read the manual before taking your first ride or allowing your child to ride your new electric ride-on toy. Keep the manual handy for future reference.

# TABLE OF CONTENTS

- A** Introduction, Safety and Warnings.....3
- B** Before You Begin Assembly .....7
- C** Parts Diagram .....8
- D** Assembly .....10
- E** Batteries & Charging.....20
- F** How to Use Your Ride-on Toy.....24
- G** Detailed Maintenance .....28
- H** Troubleshooting .....32
- I** Limited Warranty .....36

# SPECIFICATIONS

- Suitable Age ..... 3+
- Capacity ..... Up to 130 lb (59 kg)
- Max Speed ..... Low 2.5 mph / High 5 mph
- Charger / Input..... AC 120 V / 60 Hz
- Output ..... DC 24 V / 1A
- Charging..... 12-18 Hours
- Battery ..... 24 V / 7 Ah, 1x Battery
- Size ..... 45 x 30 x 43 in
- Average Battery Life ..... 300 Charges

This is an estimate only, not a guarantee. Actual battery performance will vary based on many factors, including but not limited to maintenance, charging habits, operation of product, and temperature.

## ABOUT THIS MANUAL:

This manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new ride-on toy. It is important for you to understand your new ride-on toy.

By reading this manual before you let your child go out on their first ride, you will know how to get the most from your new ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

**NOTE:** Store the ride-on toy indoors when not in use. Avoid any exposure to rain, excessive sun, or other inclement weather.

## RIDE AT YOUR OWN RISK AND ALWAYS USE

**COMMON SENSE:** This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain or properly use your ride-on toy. Because any fall can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual or the risk of falling leads to a warning.

**ALWAYS USE PROPER RIDING ATTIRE:** Always wear appropriate clothing and shoes. Never ride barefoot or in sandals and make sure that shoelaces or other fasteners are tied and kept away from the wheels and drive system of the ride-on toy.

**⚠ GENERAL WARNING:** Riding an electric ride-on toy can be a dangerous activity, even under the best of circumstances. Proper maintenance of your new ride-on toy is your responsibility and helps reduce the risk of injury. Certain conditions may cause components to fail without fault of the manufacturer. The ride-on toy can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such a thing does occur, your child can become seriously injured or die, even when using safety equipment and other safety precautions.

**⚠ WARNING:** To reduce risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than two (2) riders.

**⚠ WARNING:** CHOKING HAZARD—Small parts not suitable for children under 3 years old.

**⚠ WARNING:** This toy is unsuitable for children under 3 years due to its maximum speed.

**⚠ WARNING:** This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties. Parents must make sure that children can operate the ride-on toy safely before letting them ride it.

**⚠ WARNING:** Do not ride in rain, snow, or mud, or store the ride-on toy outside without covering. Water can damage components, including the motor, electrical system, and battery.

**⚠ WARNING:** This ride-on toy is not an off-road vehicle and is intended to be ridden on smooth, level ground. Do not ride in loose dirt, sand, or gravel, which could damage moving parts, the motor, or the electrical system.

# RIDER USE & REQUIRED PARENTAL SUPERVISION

**RIDERS MUST NOT EXCEED THE WEIGHT LIMIT OF 65 LBS (29.5 KG) PER SEAT (TOTAL OF 130 LBS/59 KG) AND MUST BE OVER 3 YEARS OLD. NEVER ALLOW MORE THAN 2 CHILDREN TO RIDE THE RIDE-ON TOY SIMULTANEOUSLY.**

The age grade for the electric ride-on toy is for 3 years and older. Just because your child is within the age and weight limitations specified for the electric ride-on toy, does not mean that his/her size is appropriate to fit or maintain control of the electric ride-on toy, or that he/she is capable of safely operating the electric ride-on toy. You are the best judge of whether you or your child can safely operate the electric ride-on toy; this includes determining whether your child is at the appropriate developmental stage for safe use of the electric ride-on toy. Any rider that is unable to fit comfortably on the electric ride-on toy should never attempt to ride it. A parent's decision to allow their child to use the electric ride-on toy should be based on the child's maturity, skill and their ability to follow rules. Remember that the electric ride-on toy is intended for use only by children who are, at a minimum, able to comfortably and safely operate it.

Children operating the electric ride-on toy should be supervised by an adult at all times. Parents should ensure that children only use the electric ride-on toy safely and within their age and physical limits.

This manual contains very important safety information. It is your responsibility to completely review this information and make sure that all riders understand all of the warnings, cautions, instructions and safety topics addressed in this manual and to assure that all riders are able to safely and responsibly use the electric ride-on toy. You should periodically review and reinforce all information in this manual with all riders, especially children. You should also regularly inspect and maintain your electric ride-on toy to ensure the safety of all riders.

Make sure that your new electric ride-on toy is properly fitted to any child riding it; that it is in good repair and safe operating condition; that you and your child have gone over the use, operation and safety information in this manual; that you and your child have learned and understand what to do and what not to do with your new electric ride-on toy, including observing all applicable laws, rules and common sense.

Children should be made aware of all possible riding hazards and correct riding behavior before they ride the electric ride-on toy and should be supervised by an adult at all times. Please explain the following to them as often as necessary.



# SAFE RIDING PRACTICES & WARNINGS

- Check and obey all local laws or regulations which may be in effect in the locations where the electric ride-on toy may be used.
- Always wear appropriate clothing and shoes.
- Observe the age and weight limitations on the cover of this manual.
- Always stay seated while riding the electric ride-on toy. To stop you must take your foot off the foot pedal.
- Children must be supervised by an adult at all times to be safe.
- Always be alert and ride your electric ride-on toy defensively. Watch out for obstacles that could catch one of the electric ride-on toy's wheels or force you to turn suddenly and/or lose control. Be careful to avoid pedestrians, persons using other wheeled products (including roller or in-line skates, skateboards, scooters, bikes, etc.), children or animals who may enter your path. Always respect the rights and property of others.
- Do not activate the foot pedal unless you are seated in the ride-on toy and in a safe, outdoor environment that is suitable for riding your electric ride-on toy.
- Do not attempt or perform any stunts or tricks on the electric ride-on toy. It is not made to withstand such misuse and abuse.
- Keep both hands on the steering wheel at all times.
- Do not touch the motor on the electric ride-on toy when in use or directly after use as these parts can become extremely hot.
- Never allow more than two children to ride the electric ride-on toy at one time and never try to tow anything.
- Do not use near steps, water, or swimming pools.
- Do not ride in wet weather.
- Never immerse the electric ride-on toy in water; electrical and drive components could be damaged by water or create other potentially unsafe conditions.
- Keep your fingers and other body parts away from the motor, steering system, wheels and all other moving components.
- Never hitch onto another vehicle or let yourself be pulled or pull anyone or anything while riding the electric ride-on toy.
- Ride only on smooth, flat, dry surfaces such as pavement or level ground without loose debris, such as sand, leaves, rocks or gravel. Water, mud, ice, bumpy, uneven, slick, or rough surfaces could impair traction and contribute to possible loss of control.
- Do not ride on or near hills or steep inclines. Ride only on level ground to avoid tipping over.
- Avoid sharp turns, bumps, drainage grates, and other obstacles.
- Do not ride at night or where there is limited visibility.
- Do not ride indoors or on surfaces that could become damaged such as carpet or flooring.
- Do not ride on streets, around cars, or in foot or vehicle traffic.
- Regularly check the electric ride-on toy and its components. If any parts are broken or worn, do not ride the electric ride-on toy until you have fixed or replaced the broken or worn parts.

Contact our Customer Service Team at [dynacraftwheels.com/contact](https://www.dynacraftwheels.com/contact) for replacement parts.

# SAFE RIDING PRACTICES & WARNINGS

- Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with wheels or other moving parts.
- Before each cycle of operation, you must perform the pre-operation checks specified in this manual or by the manufacturer, including:
  - That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition;
  - That the area that the unit is to be operated in is safe and suitable for safe operation;
  - That all safety labels are in place and understood by everyone, including the riders;
  - That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; and
  - That tires/wheels are in good condition and have sufficient tread remaining.
- Avoid sharp bumps, drainage grates, and sudden surface changes.

## PRE-RIDE SAFETY CHECKLIST

- Check to make sure that all components are properly secured and are functioning according to the manufacturer's specifications.
- Components must be maintained and repaired and only with the manufacturer's authorized replacement parts. Installation should be performed only by an adult or qualified personnel.

## USING THE CHARGER

The charger should be examined regularly for damage to the cord, plug, enclosure and other parts. In the event such damage has occurred, the electric ride-on toy should not be charged until the charger has been repaired by qualified personnel or replaced. Use only the supplied, recommended charger.

- Always use caution when charging.
- The charger is not a toy and should be operated by an adult.
- Never operate the charger near flammable materials or liquids, and operate the charger in well-ventilated areas.
- Disconnect the charger and unplug it from the electric ride-on toy when not in use.
- Do not exceed the recommended charging time.
- Always disconnect the charger from the electric ride-on toy prior to wiping down or cleaning the electric ride-on toy with any liquid.

 **WARNING: DO NOT USE NON-ORIGINAL OR NON-RECOMMENDED PRODUCTS WITH YOUR ELECTRIC RIDE-ON TOY.** Altering of the original components or use of non-recommended replacement parts may or may not be compatible with the design and will void the warranty and may cause an unsafe condition resulting in serious injury or death. Contact our Customer Service Team for original replacement parts at [dyncraftwheels.com/contact](https://dyncraftwheels.com/contact).

## BEFORE YOU BEGIN ASSEMBLY

B

**NOTE:** Remove all packing and items from the display box. Make sure that the power switch is turned OFF before assembling the electric ride-on toy.

**ESTIMATED ASSEMBLY TIME:** Because this ride-on toy is heavy and large, we strongly suggest two people to complete assembly. You should allow approximately 45 minutes for assembly, not including initial charging time. Initial charging can take approximately 18 hours (see pages 20–23 for charging information).



### DO NOT RETURN THIS ITEM TO THE STORE

Please contact Dynacraft Customer Service for assistance.

[dyncraftwheels.com/contact](https://dyncraftwheels.com/contact) or 1-800-551-0032

If you experience a problem with this product or are missing a part, please contact our customer service team at [dyncraftwheels.com/contact](https://dyncraftwheels.com/contact), rather than return this product to the store. Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.

**⚠ WARNING:** Never modify or alter the electrical system. Risk of fire. Do not bypass the fuse. Alterations could cause a fire or explosion resulting in serious injury or death and could also ruin the electrical system.



**⚠ WARNING:** FAILURE TO HEED THE WARNINGS LISTED ABOVE INCREASES RISK OF POTENTIALLY SERIOUS INJURY. USE THE APPROPRIATE CAUTION WHEN RIDING AND ALWAYS WEAR APPROPRIATE CLOTHING AND SHOES.

**CARRIAGE PARTS**

- A.** Hardware (see page 9)
- B.** Roof Tiara x1
- C.** Roof x1
- D.** Decorative Lantern x4
- E.** Roof Support x2
- F.** Front Undercarriage Flourish x2
- G.** Front Wheel x2
- H.** Front Axle Assembly x1
- I.** Plastic Body Assembly x1
- J.** Gear box x2
- K.** Rear Axle x1
- L.** Rear Wheel x2
- M.** Axle Cap x4
- N.** Rear Undercarriage Flourish x2
- O.** Seat Bottom x1
- P.** Seat Back x1
- Q.** Steering Wheel Assembly x1
- R.** Dashboard Tiara x1



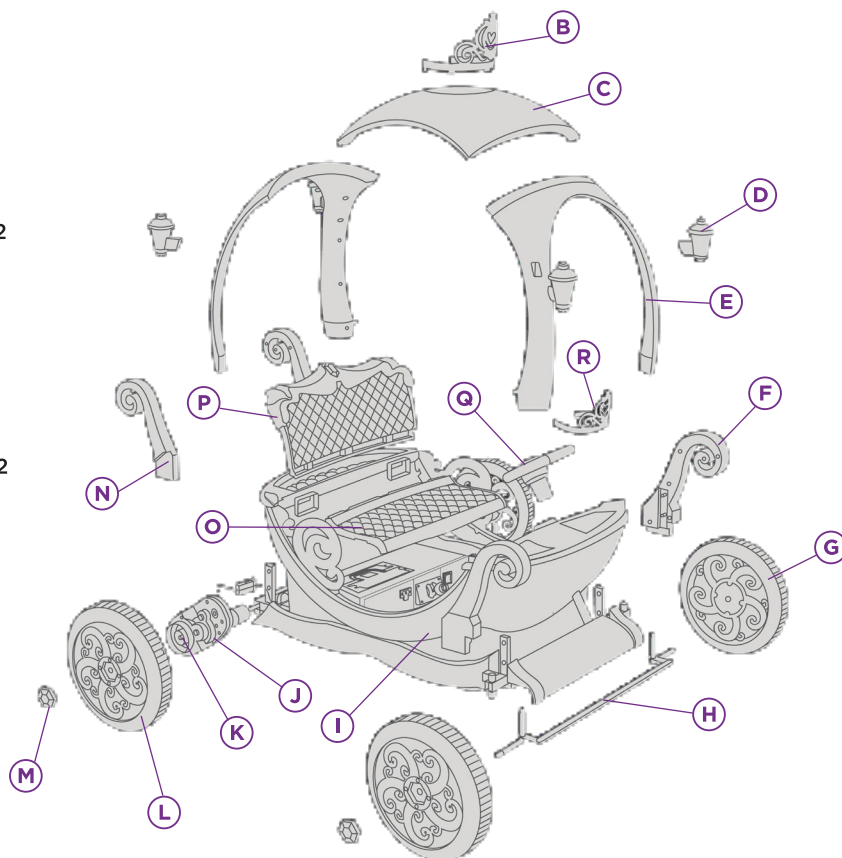



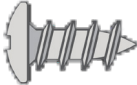
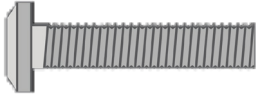






**SEPARATE ITEMS**

- S.** Remote Control x1
- T.** 24V/7Ah Battery x1
- U.** Charger x1

**S****T****U**

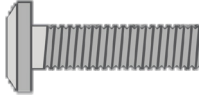
**NOTE:** Some parts shown are assembled on both sides of ride-on toy. Parts are packaged at both ends of box and in ride-on chassis. Ensure all parts are present before assembly.

# PARTS DIAGRAM: HARDWARE
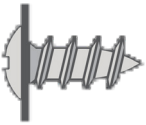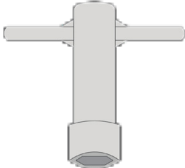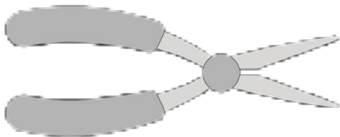
<b>A1.</b> M6 Lock Nut x2 <b>A2.</b> 6 mm Washer x2 <b>A3.</b> M6x16 Machine Screw x2 <b>A4.</b> 12 mm Washer x6		<b>A5.</b> M10 Lock Nut x4 <b>A6.</b> Split Pin x4 <b>A7.</b> 4x12 Round Head Screw x30 <b>A8.</b> M5x35 Machine Screw x1		<b>A9.</b> M5 Lock Nut x1 <b>A10.</b> M5x16 Machine Screw x2 <b>A11.</b> 4x12 Large Head Screw x8	
<b>A1</b>  x2	<b>A2</b>  x2	<b>A3</b>  x2	<b>A4</b>  x6	<b>A5</b>  x4	
<b>A6</b>  x4	<b>A7</b>  x30	<b>A8</b>  x1	<b>A9</b>  x1	<b>A10</b>  x2	
<b>A11</b>  x8	<b>TOOLS INCLUDED:</b>  17mm Socket Wrench		<b>TOOLS NEEDED:</b>   Needle-Nose Pliers      Phillips Head Screwdriver		


Your new ride-on toy requires adult assembly. Because your new ride-on toy is heavy and large, we strongly suggest using two people to finish assembly. Set aside around 45 minutes for assembly. Identify all parts before assembly and save all packaging material until assembly is completed to ensure that no parts are discarded.

## 1. FRONT UNDERCARRIAGE FLOURISH ASSEMBLY

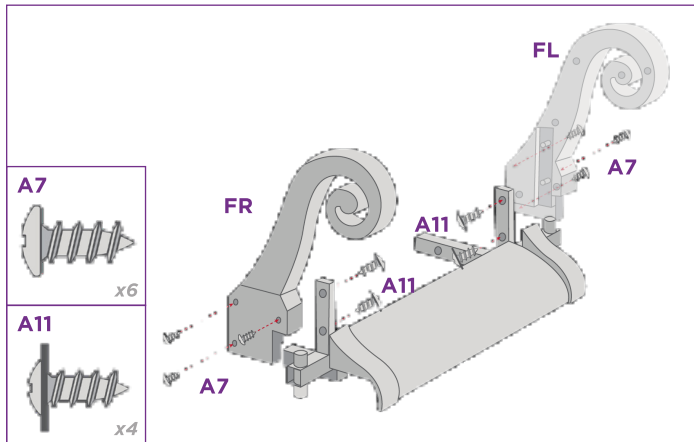

- Remove **A11 (x2)** on the inner side of the front undercarriage flourish.
- Slide the front undercarriage flourish and align it with the two holes in the black vertical steel tube at front of the ride-on toy, secure it with **A7 (x3)** and **A11 (x2)**.
- Repeat above operation for the front undercarriage flourish on the other side.

## 2. REAR UNDERCARRIAGE FLOURISH ASSEMBLY

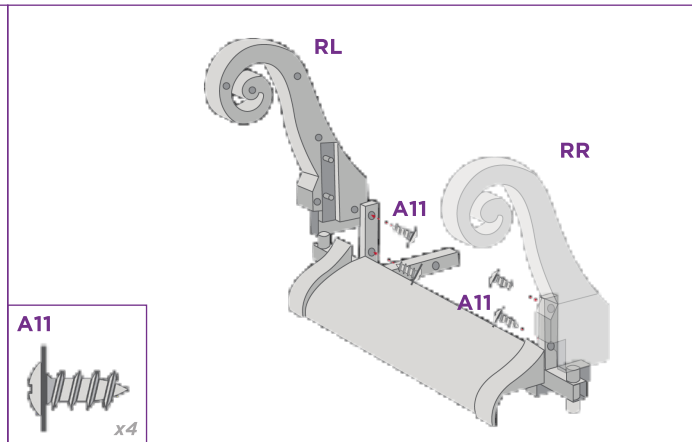


- Remove **A11 (x2)** on the inner side of the rear undercarriage flourish.
- Slide the rear undercarriage flourish and align it with the two holes in the black vertical steel tube at back of the ride-on toy body, secure it with **A11 (x2)**.
- Repeat above operation for the rear undercarriage flourish on the other side.

**⚠ WARNING:** Children can be harmed by small parts, sharp edges and sharp points in the ride-on toy's unassembled state, or by electrical items. In the unassembled state, this package contains small parts. Adult assembly is required; children should not handle parts, or help in assembly of the ride-on toy.

# ASSEMBLY: FRONT AXLE

## 3. FRONT AXLE ASSEMBLY

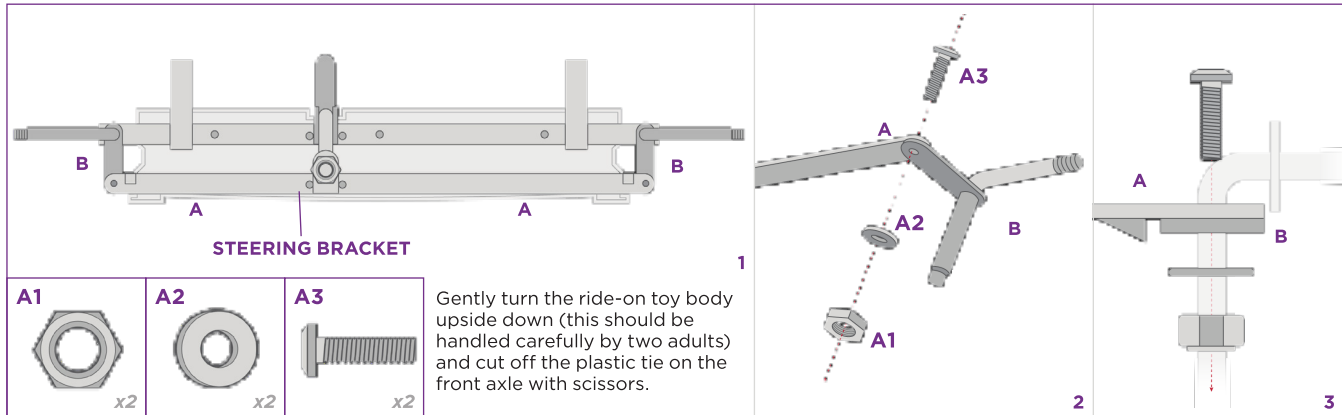


- Remove **A1**, **A2**, and **A3** from the steering bracket at both sides.
- Adjust the front axles so that the axles are in the correct position as shown in diagram 2; locate plate A over plates B, then reinsert **A3**, making sure the **A3** goes through the holes in metal plates A and B (ensure plate A sits over plate B with the stopper as shown in diagram 3, make sure A and B are perpendicular to each other); attach **A2** and **A1** and secure with needle-nose pliers. **Note: Do not overtighten.**
- Repeat above operation for the front axle on the other side.
- Make sure to retighten the locknut on the bent end of the steering column with **17mm socket wrench**.

**! WARNING:** Make sure front axle assembly is properly secured before letting anyone use the ride-on toy.

# ASSEMBLY: GEAR BOX & REAR AXLE

## 4. GEAR BOX AND REAR AXLE ASSEMBLY

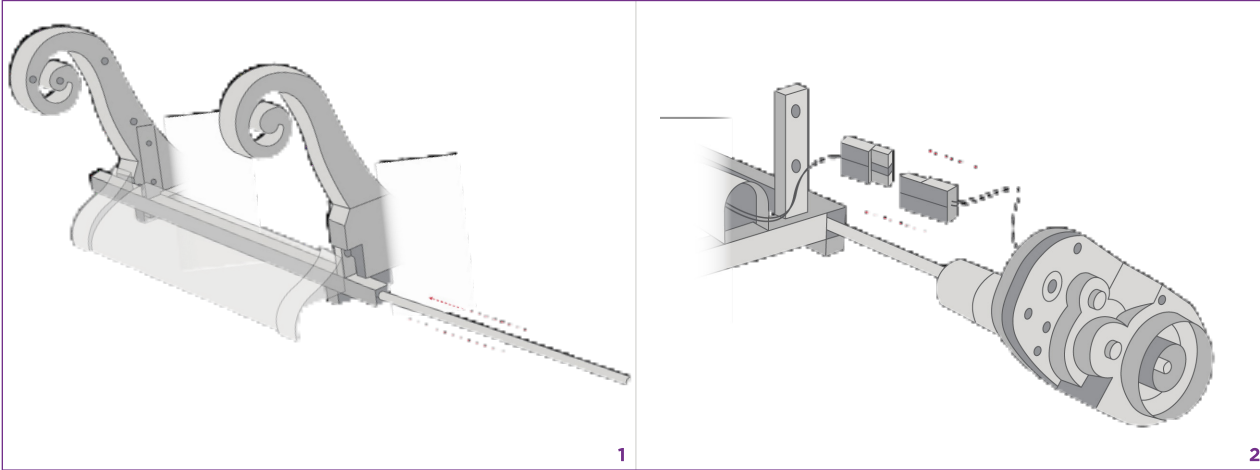


- Remove all hardware from the rear axle and place aside for reassembly.
- Insert the rear axle through the hole in the square tube at the rear of the ride-on toy (Diagram 1).
- Slide a gear box onto the rear axle, plug the motor connector into the motor output connector (Diagram 2).
- Insert the connectors and motor into the hole in the rear of the ride-on toy.
- Repeat the last step for the gear box on the other side.




# ASSEMBLY: FRONT & REAR WHEELS

## 5. WHEEL ASSEMBLY

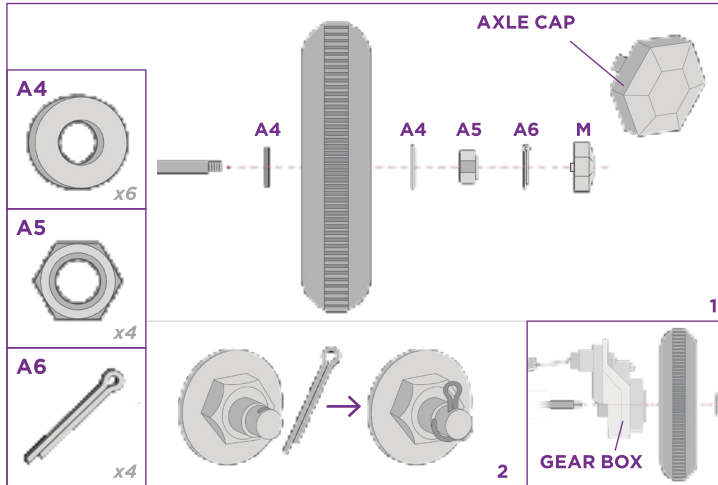

### IMPORTANT - CHECK WHEEL GAP!

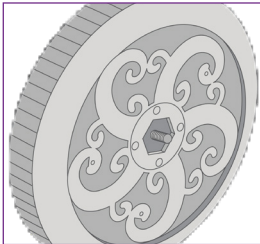

**NOTE:** If the wheel nuts are loose, the wheels will not engage the forward gear. Tighten the nut with the socket wrench.

After assembling any wheel onto the axles, check the gap between the screw thread and the outside of the wheel (refer to the diagram).

If the gap is too big, add two or three washers on the axle to the inside of the wheel. After tightening the nut on the outside of the wheel, spin the wheel to check if the wheel spins smoothly. If the wheel gets caught or does not spin smoothly, the friction may cause damage to the motor. Try increasing the gap by removing one or two washers to ensure the wheel spins smoothly.

### FRONT WHEEL

- Remove all parts from front axle.
- Slide **A4** onto the axle.
- Find a front wheel labeled FRONT, slide the wheel onto the axle.
- Install **A4** and **A5**, then tighten it with the **17mm socket wrench**.

**NOTE:** Do not overtighten. For your safety, make sure you insert a split pin (**A6**) into the hole in the end of front axle, and split it with standard needle-nose pliers.

- Insert the axle cap (**M**) until it clicks into place.
- Repeat steps above for the front wheel on the other side.


### REAR WHEEL

- Find a rear wheel labeled REAR, slide the wheel onto the rear axle and make it match up with the gear box .
- Insert **A4** onto the axle.
- While holding the rear axle with a **17mm socket wrench** at opposite, fit **A5** to the end of the rear axle with another **17mm socket wrench**.
- **DO NOT overtighten;** the rear axle ends are supposed to be exposed; 1-2 threads exposed is acceptable.
- For your safety, insert **A6** into the hole in the end of rear axle, and split it using standard needle nose pliers as shown in Diagram 2.
- Insert the axle cap (**M**) until it clicks into place.
- Repeat steps above for the rear wheel on the other side.

**⚠ WARNING:** Make sure the wheels are securely fastened. Never allow anyone to ride the ride-on toy with loose wheels.


# ASSEMBLY: DASHBOARD

## 6. DASHBOARD TIARA ASSEMBLY

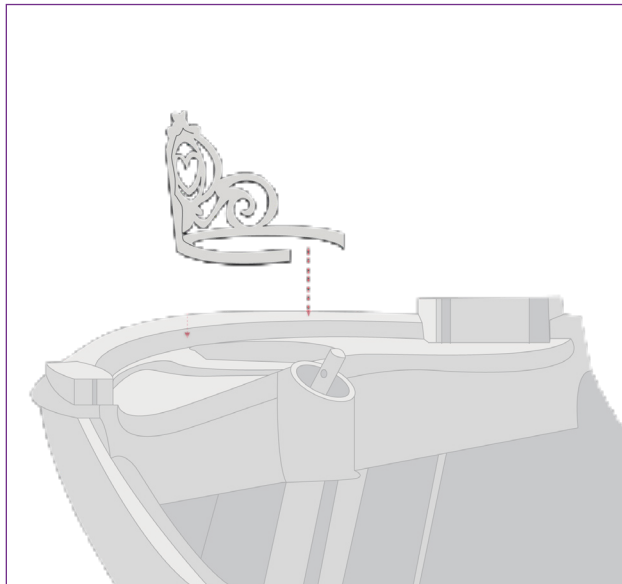


- Insert and click the dashboard tiara into the slot in the dashboard.

## 7. STEERING WHEEL

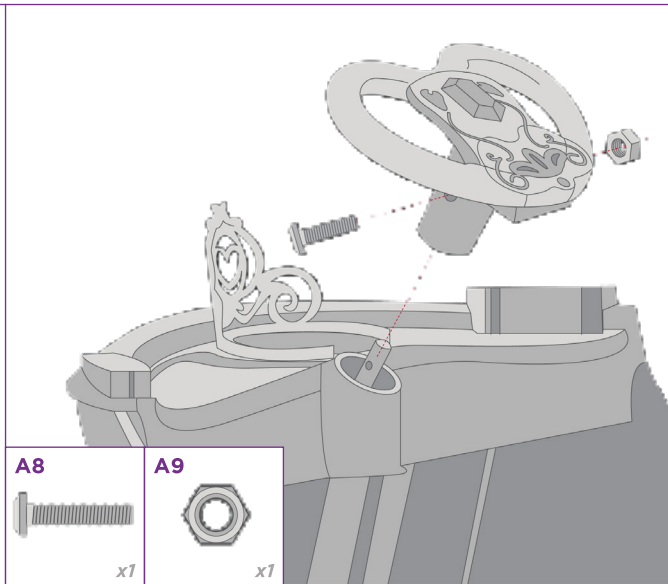

- Remove **A8** and **A9** from the steering column.
- Insert the steering wheel onto the end of the steering column, lining up the hole in the steering wheel and the hole in the steering column. Reinsert the **A8** as shown, and tighten it with **A9** securely.

## 8. STEERING WHEEL BATTERIES

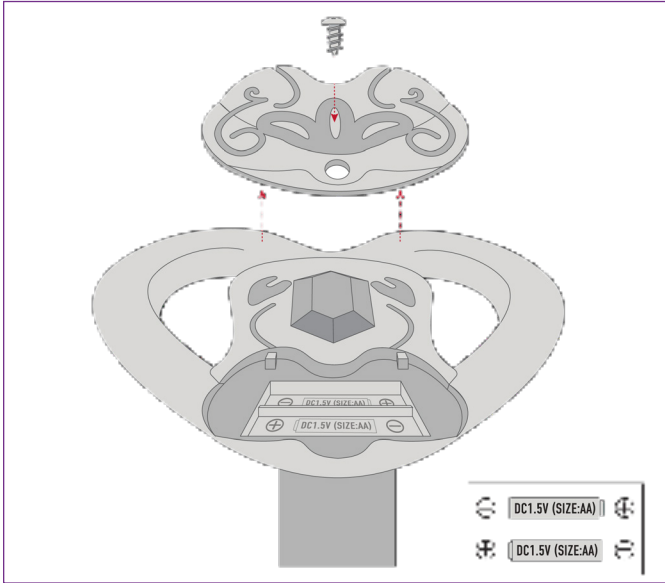

- Unscrew the screw in the steering wheel and remove the cover.
- Insert 2x **1.5V size AA AM-3** or **LR6** batteries, observing the polarity indicated.
- Replace the cover and tighten the screw to secure it in place.

**NOTE:** Batteries are not included.

## STEERING WHEEL BATTERY SAFETY INFORMATION:


Batteries may leak fluids that can cause chemical burn, injury or ruin your product.

To avoid battery leakage:

- Install batteries correctly, observing the polarity (+/-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (NiMH).
- Remove the batteries from the battery compartment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the battery compartment.
- Do not dispose of batteries in fire.
- Do not short circuit the supply terminals.
- Replace the batteries when the horn sounds become distorted.
- Non-rechargeable batteries should not be recharged.
- Use only batteries of the same or equivalent type as recommended.
- If rechargeable batteries are used, they should only be charged by an adult.
- Remove rechargeable batteries from the product before charging.
- Battery chargers used with toys must be examined regularly for damage to the cord, plug, enclosure and other parts. In the event that such damage is found, the toy must not be used with the battery charger until the damage has been repaired.

# ASSEMBLY: SEAT


## 9. POWER SUPPLY CONNECTION

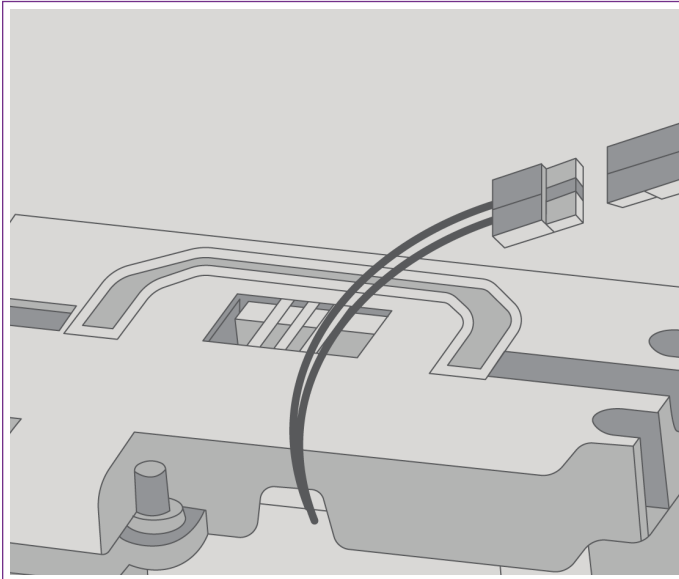

- Securely plug the battery connector into the wire connector.


**NOTE:** The battery is disconnected for shipment to prevent the battery from draining.

## 10. SEAT INSTALLATION

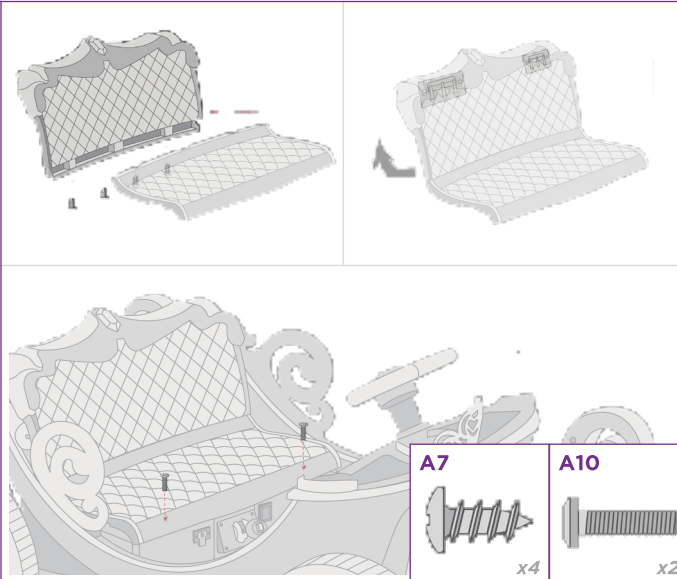


- Insert the seat bottom into the seat back, and tighten it with **A7 (x4)**.
- Hook the clips (in the back of the seat) up into the slots in the back of the ride-on toy body, then click the seat into the ride-on toy body.
- Tighten the seat with **A10 (x2)** (which comes attached to the seat).

## 11. LANTERN ASSEMBLY

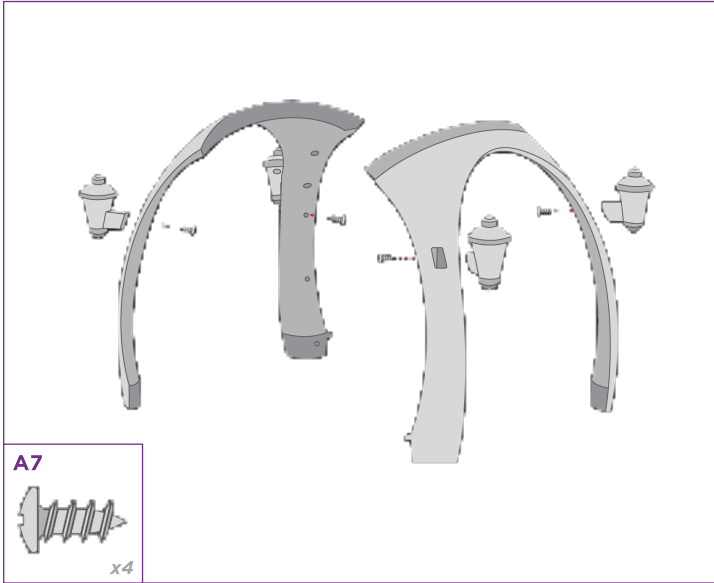

## 12. ROOF SUPPORT ASSEMBLY

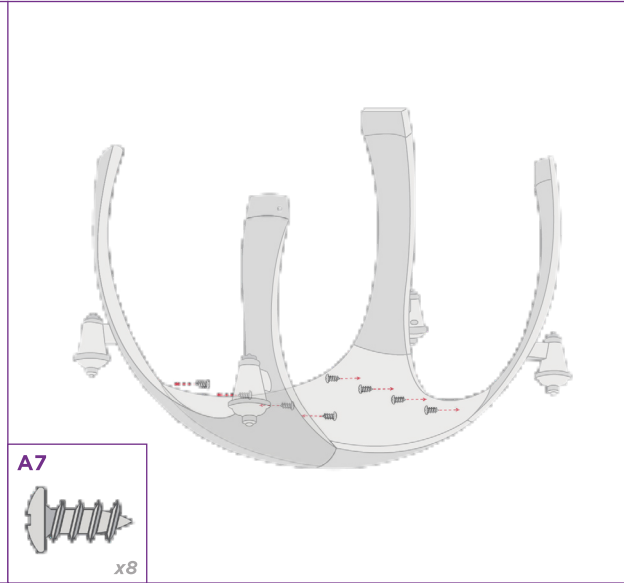


- Find one Decorative Lantern marked with “A”. Insert the Decorative Lantern into the hole marked with “A” in the Roof Support, and tighten it with **A7**.
- Find one Decorative Lantern marked with “B”. Insert the Decorative Lantern into the hole marked with “B” in the Roof Support, and tighten it with **A7**.
- Repeat steps above for the Decorative Lanterns on the other side.

- Insert the Roof Support into the Roof.
- Secure the Roof Support with **A7 (x4)**.
- Repeat steps above for the other Roof Support.



# ASSEMBLY: ROOF

## 13. ROOF TIARA ASSEMBLY

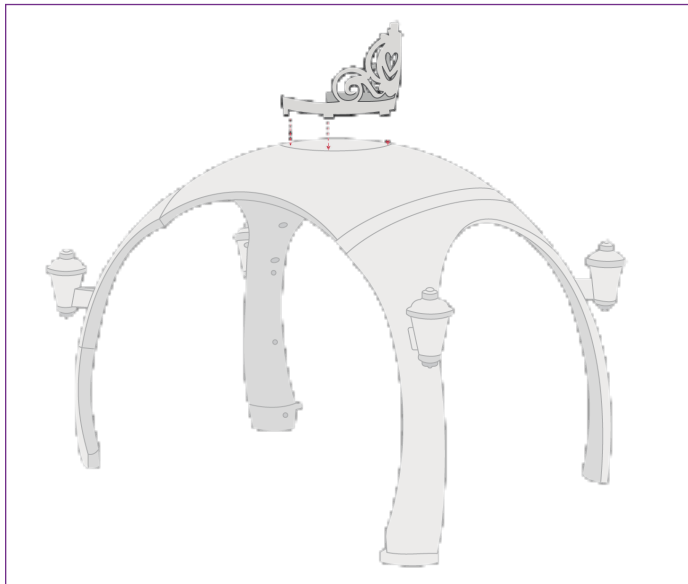

- Insert and click the Roof Tiara into slot in the Roof.

## 14. CARRIAGE ROOF ASSEMBLY

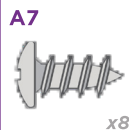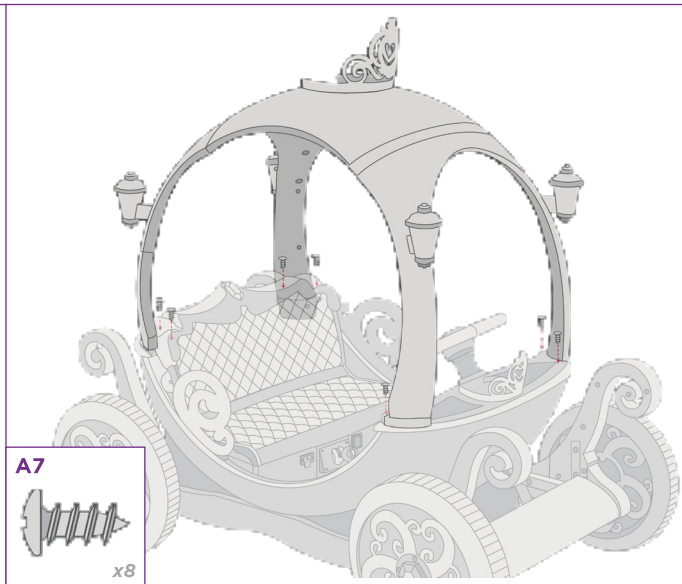


- Insert the Carriage Roof into the four holes in the ride-on toy body.
- Secure the Carriage Roof with **A7 (x8)**.

**NOTE:** Make sure Roof Tiara is facing forward as shown.

# ASSEMBLY: REMOTE CONTROL

## 15. REMOTE CONTROL BATTERY INSTALLATION

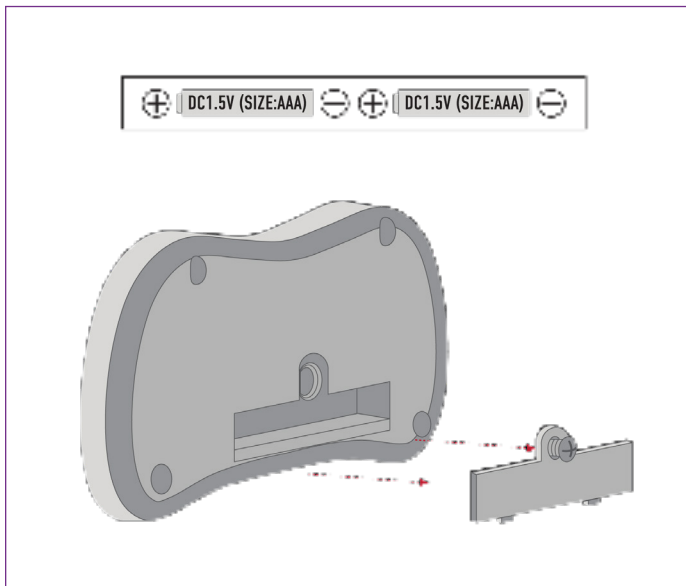

- Unscrew the screw on the back of the remote control and remove the battery cover.
- Insert 2x **1.5V size AAA** or **LR 03** batteries, observing the polarity indicated.
- Replace the battery cover and tighten the screw to secure it in place.

**NOTE:** Batteries are not included.

## REMOTE CONTROLLER BATTERY SAFETY INFORMATION:

Batteries may leak fluids that can cause chemical burn, injury or ruin your product.

To avoid battery leakage:

- Install batteries correctly, observing the polarity (+/-) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (NiMH).
- Remove the batteries from the battery compartment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the battery compartment.
- Do not dispose of batteries in fire.
- Do not short circuit the supply terminals.
- Replace the batteries when the indicator lights are dim.
- Non-rechargeable batteries should not be recharged.
- Use only batteries of the same or equivalent type as recommended.
- If rechargeable batteries are used, they should only be charged by an adult.
- Remove rechargeable batteries from the product before charging.
- Battery chargers used with toys must be examined regularly for damage to the cord, plug, enclosure and other parts. In the event that such damage is found, the toy must not be used with the battery charger until the damage has been repaired.

**IMPORTANT!**

Before first time use, charge the battery for at least 18 hours. Charge the battery for at least 12 hours after each use of the ride-on toy. Never charge the battery longer than 30 hours. Overcharging or undercharging the battery may shorten battery life and decrease ride-on toy running time.

**IMPORTANT NOTE:**

- We recommend that you start charging your battery before beginning assembly of your new ride-on toy.
- The battery must be upright while charging.
- The charger is not a toy, and should only be operated by adults.
- Do not short-circuit the battery.
- You do not need to remove the battery from your ride-on toy to recharge it.
- Before charging the battery, examine the battery case for cracks and other damage which may cause sulfuric acid (electrolyte) to leak during the charging process. If damage is detected, do not charge the battery or use it in your ride-on toy. Battery acid is very corrosive and can cause severe damage to surfaces it contacts.
- Do not charge the battery on a surface (such as a kitchen counter top) which could be damaged by the acid contained inside the battery. Take precautions to protect the surface on which you charge your battery.
- Use only an original charger (AC120 V/60 Hz) with an output of DC 24 V/1A to charge your ride-on toy battery.

**NOTE TO ADULTS:**

Regularly examine the charger for damage to the cord, plug, housing, or other parts that may result in the risk of fire, electric shock, or injury.

- If your battery is old and will not accept a charge, do not leave it in the ride-on toy. Always remove a dead battery from the ride-on toy.
- After the first charge, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours. Charge the battery after each use, regardless of how long the ride-on toy was used.
- Do not allow the battery to run down completely before charging.
- Charge the battery before storing the ride-on toy.
- Charge the battery at least once per month, even if the ride-on toy has not been used.



## NOTE:

- This product has **CHARGING PROTECTION**: when charging, all the functions will be cut off.

## RECHARGING


- Recharging after initial charge – charge for at least 12 hours, and never charge the battery longer than 30 hours.
- When the ride-on toy begins to run slowly, recharge the battery.
- After each use, or at least once per month when not in use, recharge the battery for at least 12 hours, and never charge the battery longer than 30 hours.

## PREVENT FIRE


- Never modify the electrical system.
- Alterations could cause a fire resulting in serious injury and could also ruin the electrical system.
- Use of the wrong type battery or charger could cause a fire or explosion, resulting in serious injury.
- Use of non-original components on this ride-on toy could cause overheating, fire or explosion.
- The battery must be handled by adults only.
- The battery is heavy and contains sulfuric acid (electrolyte).
- Dropping the battery could result in serious injury.
- Never allow children to charge the battery.
- Battery charging must be done by adults only. A child could be injured by the electricity involved in charging the battery.
- Never lift or carry the battery by the wires or connector, this can damage the battery and possibly cause a fire resulting in serious injury. Lift and carry the battery by the case only.
- Read and follow the safety instructions on the battery.
- Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery.
- If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

# CHARGING METHODS

## CHARGING METHOD #1

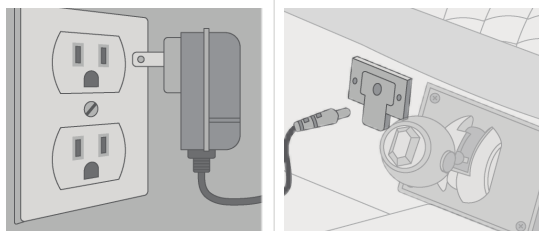

## CHARGING METHOD #2

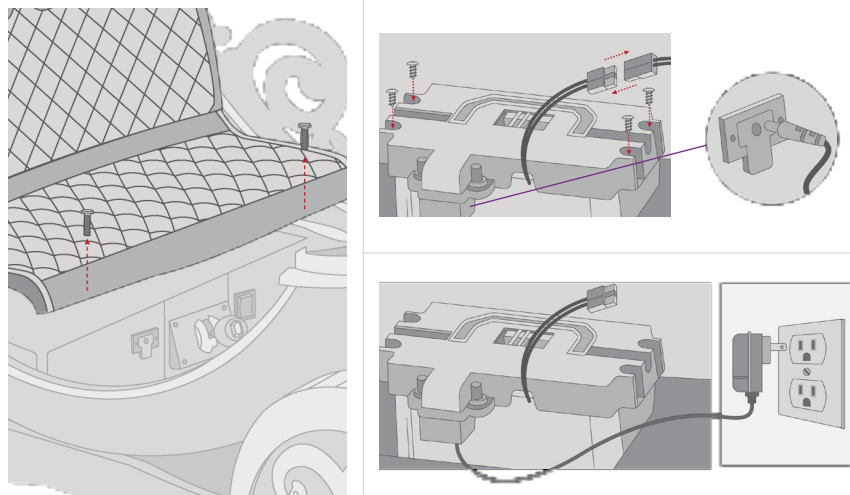

- Plug the charger port into the input socket (the socket is under the seat).
- Plug the charger plug into a wall outlet. The battery will begin charging.

- Unscrew the two screws on the seat and remove the seat.
- Use a screwdriver to remove the four screws from the battery. Unplug the wire connector (which is connected to the battery connector).
- Plug the charger port into the charging input socket (the socket is on the battery side with INPUT label).
- Plug the charger plug into a wall outlet. The battery will begin charging.


**NOTE:** Red LED light indicates battery is charging and a green LED light indicates battery is nearly fully charged. (If the lights on the charger do not light up, check the power to the outlets). If you have any charging questions or issues, please make sure that you have charged your unit according to the recommended charging times outlined in this manual, i.e., at least 18 hours before first use and at least 12 hours after each subsequent use, before contacting our Customer Service Team.

# BATTERY CARE & DISPOSAL

## CARE:

- Leaving the battery in a discharged condition will ruin it.
- Always remove an exhausted battery from the ride-on toy. Battery leakage and corrosion can damage the ride-on toy.
- Do not store the battery in temperatures above 75°F (23.5°C) or below 32°F (0°C).
- Use only a **24V/7Ah** battery. Remember to charge the new battery for at least 18 hours before first use.
- Prevent the battery from moving freely inside the battery compartment. Always use the battery retainer to secure the battery in the battery compartment.

Examine the battery, charger and their connectors for excessive wear or damage each time you charge the battery. If damage is detected, do not use the charger or the battery until you have replaced the worn or damaged part.

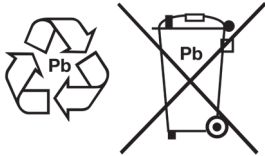


THIS PRODUCT CONTAINS SEALED LEAD ACID BATTERIES WHICH MUST BE RECYCLED IN ACCORDANCE TO YOUR LOCAL AND STATE LAWS. PLEASE CAREFULLY READ AND UNDERSTAND THE FOLLOWING DISPOSAL INSTRUCTIONS:

## DISPOSAL:

This product contains sealed lead acid batteries which must be disposed of or recycled in an environmentally safe manner. Do not dispose of the batteries in your household trash. Do not dispose of the batteries in a fire, as the battery may explode or leak. The incineration, disposal in landfill and/or placing sealed lead acid batteries with household trash is prohibited by law in most areas.

Return exhausted batteries to a state or federal approved lead acid battery recycler or check with your local retailer of vehicle batteries. If you live in Florida, Minnesota or various other states, it is prohibited by law to throw away lead-acid batteries in the municipal waste stream. Check local laws for proper handling and recycling of lead-acid batteries.

**⚠ WARNING:** If a battery leak develops, avoid contact with the leaking acid and place the battery in a plastic bag. See instructions above for proper disposal. If acid comes into contact with skin or eyes, flush with cool water for at least 15 minutes and contact a physician. If acid is internally ingested, give water, milk of magnesia or egg whites immediately. Never give emetics or induce vomiting. Call a physician.

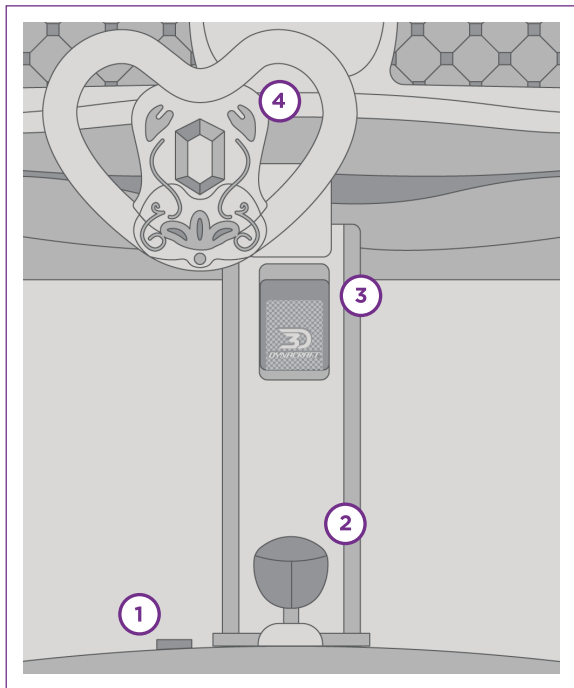

### 1. POWER SWITCH

- Turn the ride-on toy on or off.

### 2. FORWARD-REVERSE SHIFT LEVER

- For high speed, shift the lever to the “High” position.
- For low speed, shift the lever to the “Low” position.
- To move the car backward, shift the lever to the “Reverse” position.

**NOTE:** Use low speed until you get familiar with the ride-on toy.

### 3. FOOT PEDAL

- To move the ride-on toy, press the foot pedal down.
- To stop the ride-on toy, take your foot off the foot pedal.

**NOTE:** For your safety, this ride-on toy has been designed with a one second delay start. When the pedal is pressed, the ride-on toy will start to move one second later.

### 4. SOUND BUTTON

- To activate sound and light, press the center button on the steering wheel.

### STOP

- To stop the ride-on toy, take your foot off the foot pedal.

**⚠ WARNING:** The ride-on toy does not have brakes.  
Do not park or ride on any slopes or steep inclines.

**⚠ WARNING:** For your safety, this ride-on toy has been designed with a one second delay start. When the pedal is pressed, the ride-on toy will start to move one second later.

**⚠ WARNING:** Use low speed until you get familiar with your new ride-on toy.

# HOW TO USE YOUR REMOTE CONTROL

## CONNECTION BUTTON

- Flip the Power Switch of the ride-on toy OFF.
- Press down and hold the Connection Button for 5 seconds, Light 2 will flicker.
- Flip the Power Switch ON.
- When Light 1 and Light 2 are both lit, the Remote Control is connected to the ride-on toy.

**NOTE:** When replacing batteries of the remote controller, if the connection with the ride-on toy becomes disconnected, please repeat the operation above to reconnect.

## PARENT CONTROL MODE

- Press the Connection Button 6 times rapidly within 3 seconds. When the Green Light is lit, it means Parent Control mode is working and the foot pedal will not function.

### NOTE:

- When Green Light is on, it means the ride-on toy is in Parent Control Mode.
- In Parent Control Mode, the parent can operate the ride-on toy via this remote control. Parent Control Mode is designed for children's safety. Ride-on toy operations will be overridden, preventing children from using the foot pedal. As children become familiar with the ride-on toy, the Parent Control Mode may be shut off by repeating the operation described above.

## FORWARD BUTTON

- Press and hold the Forward Button to move the ride-on toy forward. Release the Forward Button to stop the ride-on toy.

## PARKING BUTTON

- Press the Parking Button to stop the ride-on toy. The remote controller lights will flicker and stop all operations.
- Press the Parking Button again to resume operations. The lights will turn off.

## REVERSE BUTTON

- Press and hold the Reverse Button to move the ride-on toy backward. Release the Reverse Button to stop the ride-on toy.

## GREEN LIGHT

## LIGHT 1 LIGHT 2

## RIGHT BUTTON


- Press and hold the Right Button, the ride-on toy will turn right while going forward or backward.

## LEFT BUTTON

- Press and hold the Left Button, the ride-on toy will turn left while going forward or backward.

## SPEED BUTTON

- Press the Speed Button to change the speed. When Light 1 is lit means low speed, when Light 1 and Light 2 both light up means high speed.

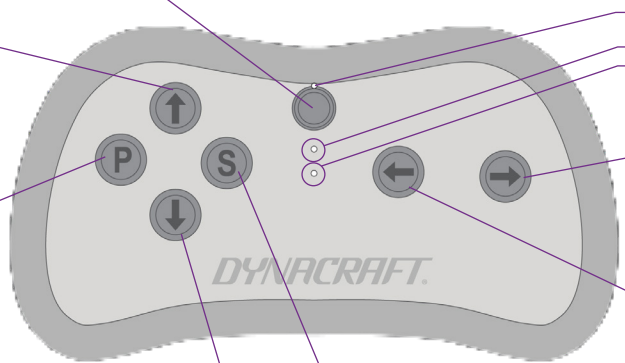

**⚠ WARNING:** The remote control batteries should not be replaced while the remote control is in use as the connection with the ride-on toy will be lost.

**⚠ WARNING:** When using the remote control, you must stay within the 100 foot range with the ride-on and avoid using the remote control near electromagnetic interference sources.

# IMPORTANT NOTE ABOUT YOUR RIDE-ON TOY

## IMPORTANT

- Always stop ride-on toy when changing the direction to avoid damage to the gears and motor.
- This ride-on toy has an adjustable seat belt; instruct children on how to fasten the seat belt before using.
- Do not let any child touch the wheels or be near them when the ride-on toy is moving.
- To avoid accidents, inspect the ride-on toy before riding to ensure that it is in proper working order and safe to ride.
- This toy has no brake; to stop, remove foot from the foot pedal.
- Check all the screws, cap nuts and protective coverings regularly and tighten as required. Check plastic parts on a regular basis for cracks or broken pieces.
- Your new battery must charge for at least 18 hours before using it in the ride-on toy for the first time.
- Do not wash the ride-on toy with water; clean it with a cloth.

## IMPORTANT NOTE ABOUT REMOTE CONTROLLER

- The remote controller should only be operated by adults. Children are not allowed to operate it.
- Please ensure battery capacity of the remote controller is sufficient before use (when on a low current, its indicator lights will dim).
- The remote controller has energy-saving settings. After idling for about 10 seconds, it will automatically sleep. Press any button to restart.
- When first using, or after replacing new batteries, please proceed with frequency-matching operation.
- Use the remote controller together with the ride on toy within the range of 100 ft (30 m). If control is lost, move closer to the ride-on toy.
- Avoid using near electromagnetic interference sources. Common electromagnetic interference sources including high-voltage wires, high-voltage transmission stations, radar stations, mobile phone base stations, broadcast signal towers, Wi-Fi hot spots, routers, and Bluetooth devices.
- Keep the remote controller nearby when not in use.
- See pages 20-21 for battery safety information.

## SAFETY PRECAUTIONS

- Children must have adult supervision at all times.
- Do not ride on the road, footpaths, near pools, or bodies of water.
- Do not allow children under the recommended age to operate the ride-on toy; refer to the age grading.
- Do not allow riders over the recommended weight rating or outside of the recommended age range to use the ride-on toy.
- To stop the ride-on toy, you must take your foot off the pedal.
- Charging should only be done by an adult.
- An adult must teach the child how to operate the ride-on toy.
- Do not ride on hills or slopes, in sand or on other soft, wet, or slippery surfaces.
- Do not use a different size battery. Use only original or recommended replacement batteries.
- The ride-on toy is designed to carry only a maximum weight of 130 lb at a time. Never allow more than two riders or over-load the ride-on toy.
- This product should be assembled and checked by adults before use.

# MAINTAINING YOUR RIDE-ON TOY

## GENERAL MAINTENANCE

- Occasionally use a lightweight oil to lubricate moving parts such as the wheels and the steering linkages.
- Park the ride-on toy indoors or cover it with a tarp to protect it from wet weather.
- Keep the ride-on toy away from sources of heat, such as stoves and heaters. Plastic parts may melt.

## ADULTS ONLY:

Recharge the battery after each use. Recharge the battery at least once a month when the ride-on toy is not being used.

**DO NOT** wash the ride-on toy with a hose or with soap and water.

**DO NOT** drive the ride-on toy in rainy or snowy weather. Water will damage the motor, electrical system, and battery.

**DO NOT** store the ride-on toy, outside in the rain or exposed to the elements. The ride-on toy should be stored inside or covered to protect it from exposure to the elements.

Clean the ride-on toy with a soft, dry cloth. To restore shine to plastic parts, use a non wax furniture polish.

**DO NOT** use car wax, abrasive cleaners, or cleaners that contain ammonia or isopropyl alcohol.


**DO NOT** drive the ride-on toy in loose dirt, sand or fine gravel, which could damage moving parts, motors, or the electric system.

## ABOUT FUSES

Your ride-on toy is equipped with a safety thermal fuse. The fuse is a self-resetting safety device which automatically trips and shuts down operation of the ride-on toy if the ride-on toy is overloaded or the operating conditions are too severe. Once a fuse has tripped, **do not continuously push on the foot pedal**. The fuse will automatically reset itself after approximately 2 minutes and allow the ride-on toy to resume normal operations. To avoid repeated automatic shut-downs, do not overload the ride-on toy by exceeding the 130 lb (59 kg) maximum weight capacity or by towing anything behind the ride-on toy. Avoid severe driving conditions, such as driving up slopes or running into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.

 **WARNING:** Charge the battery before storing your ride-on toy, otherwise the battery will be damaged.


## HOW TO REPLACE FRONT WHEEL

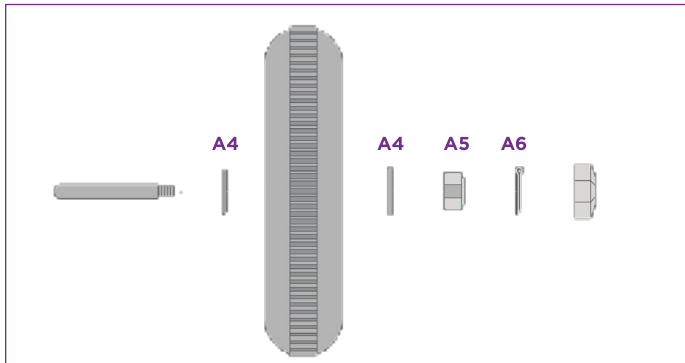

- Remove the axle cap by sliding a flat head screwdriver along the edge of the cap and carefully prying the cap open.
  - Use needle nose pliers to remove the split pin (**A6**) in the hole of the front axle end.
  - Remove **A5** with a **17 mm socket wrench**.
  - Remove **A4**.
  - Remove the wheel, then replace with a new wheel.
  - Remount **A4** and **A5** and securely tighten the wheel.
- NOTE:** Do not overtighten.
- Insert a split pin into the hole in the end of front axle, and split it using standard needle nose pliers.
  - Reinsert the axle cap until it clicks into place.

**IMPORTANT:** Check wheel gap (see page 13).


## HOW TO REPLACE REAR WHEEL &amp; GEAR BOX

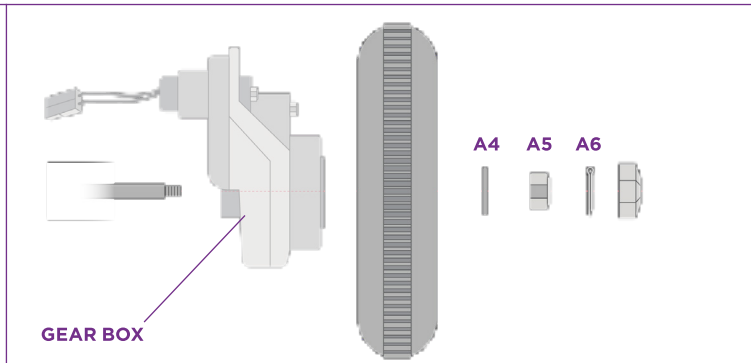


- Remove the axle cap by sliding a flat head screwdriver along the edge of the cap and carefully prying the cap open.
- Use needle nose pliers to remove the split pin (**A6**) in the hole of the rear axle end.
- Remove **A5** with a **17 mm socket wrench**.
- Remove **A4**.
- Remove the rear wheel.
- If you do not need to replace the gear box, please proceed to final step.
- Unplug the motor output connector that is connected to the gear box, and replace with a new gear box, and tightly plug the motor output connector into the new gear box motor connector.
- Remount the new wheels (see Rear Wheel Assembly steps on page 13).




## HOW TO REPLACE THE FOOT PEDAL

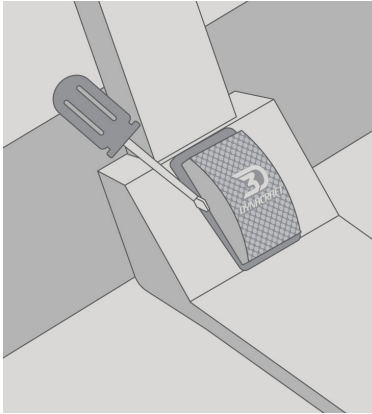

1

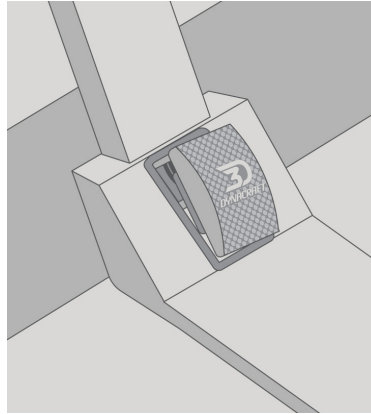

2


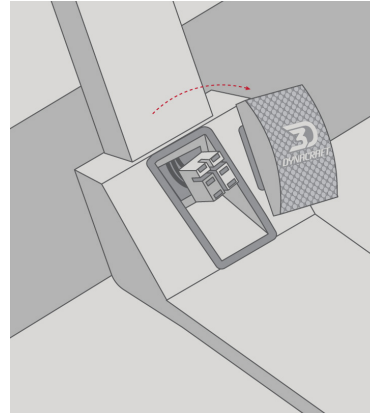


3

- Use a flat head screwdriver to gently pry the **left** side of foot pedal (Diagram 1).
- Gently remove the foot pedal.
- Disconnect the old foot pedal from the pedal switch socket.
- Replace the foot pedal with a new one. Connect the new pedal switch to the pedal switch socket, making sure that they are snugly connected in the correct position (Diagram 2).
- Insert the right side of the foot pedal into the foot pedal compartment and then gently push down on the left side of the pedal so that it snaps into place (Diagram 3).


# DETAILED MAINTENANCE

## HOW TO REPLACE THE BATTERY

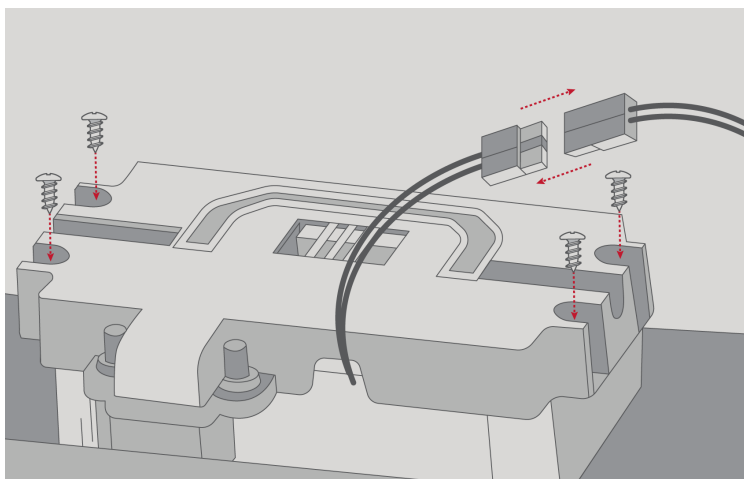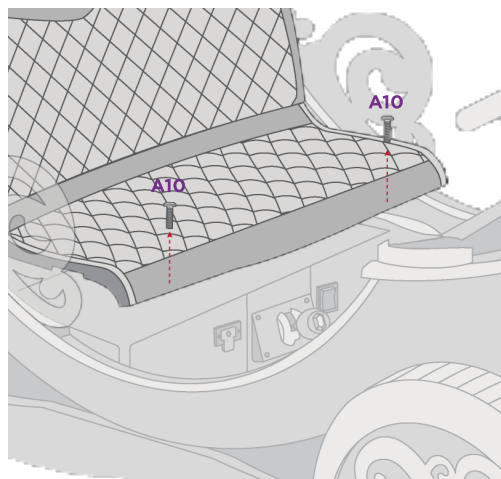


- Unscrew **A10 (x2)** from the seat and remove the seat.
- Remove the four screws from the battery.
- Unplug the wire connector (which is connected to the battery connector).
- Carefully lift the dead battery and replace it with a new one, secure it with the four screws.
- Plug the wire connector into the battery connector and replace the seat, making sure to securely fasten it with **A10 (x2)** from the first step.

## HOW TO REPLACE FORWARD-REVERSE SHIFT LEVER

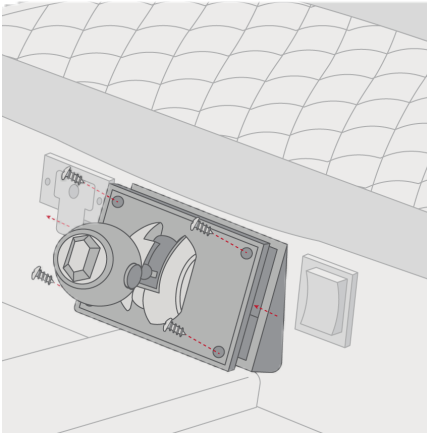

1

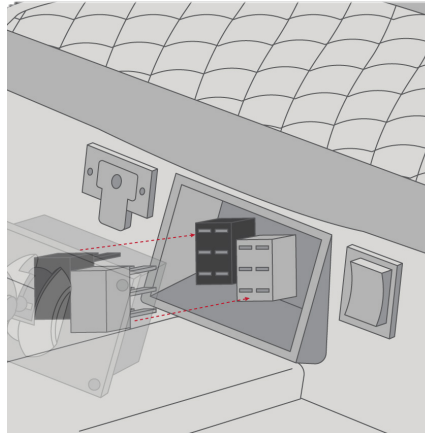

2

- Unscrew the four screws on the shift lever bracket with a screwdriver and remove the Forward-Reverse Shift Lever Assembly (Diagram 1).

- Unplug the switch sockets from the Forward-Reverse switches. (Diagram 2)
- Replace a new Forward-Reverse Shift Lever Assembly, and reconnect switch sockets with the Forward-Reverse switches.

**NOTE:** Ensure the black switch socket plugs into the black switch and the white switch socket plugs into the white switch. Failure to properly connect the plugs will result in the forward and backward directions being reversed.

- Securely fasten with the four screws.

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Ride-on Toy does not run</b>	Undercharged Battery	<p>Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours.</p> <p>Check all connectors. Make sure the battery connector is tightly plugged into the wire connector, and that the charger is plugged into the wall outlet.</p> <p>Make sure that there is power flow to the wall outlet.</p>
	Tripped Thermal Fuse	<p>The thermal fuse may trip and shut down operation if the ride-on toy is overloaded or the driving conditions are too severe. Once a fuse has tripped, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130 lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.</p>
	Electrical Switch Damage	<p>The electrical switches can become corroded due to exposure to water or moisture, or can jam due to loose dirt, sand or gravel.</p> <p>Please contact our Customer Service Team at <a href="https://dyncraftwheels.com/contact">dyncraftwheels.com/contact</a></p>
	Dead Battery	<p>Check all wires and connectors. Make sure the battery connector is tightly plugged into the wire connector and that there are no loose wires around the motor.</p> <p>If your battery is old or if you have not followed Battery Care instructions, your battery may be dead. Replace only with an original 24 V/7 Ah battery. Do not use non-original substitute parts.</p>
	Motor Damage	<p>Please contact our Customer Service Team at <a href="https://dyncraftwheels.com/contact">dyncraftwheels.com/contact</a></p>

# TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Ride-on toy was running but suddenly stopped</b>	Loose wires or connectors	Check all wires and connectors. Make sure the battery connector is tightly plugged into the wire connector, and that there are no loose wires around the motor.
	Tripped Thermal Fuse	The thermal fuse may trip and shut down operation if the ride-on toy is overloaded or the driving conditions too severe. Once a fuse has tripped, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.
<b>Short run time (less than 15 minutes per charge)</b>	Undercharged battery	<p>Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours.</p> <p>Check all wires and connectors. Make sure the battery connector is tightly plugged into the wire connector, and that the charger is plugged into the wall.</p> <p>Make sure that there is power flow to the wall outlet.</p>
	Overcharged battery	Do not charge the battery longer than 30 hours. If you suspect that your battery is damaged as a result of overcharging, change with one new original 24V/7Ah battery. Do not use non-original substitute parts.
	Battery is old and will not accept full charge	Even with proper care, a rechargeable battery does not last forever. Average battery life is 1 to 3 years depending on ride-on toy use and use conditions. Replace only with an original 24 V / 7 Ah battery. Do not use non-original substitute parts.
	Motor Damage	Please contact our Customer Service Team at <a href="https://dynacraftwheels.com/contact">dynacraftwheels.com/contact</a>

# TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
<i>continued</i> <b>Short run time (less than 15 minutes per charge)</b>	Tripped Thermal Fuse	<p>The thermal fuse may trip and shut down operation if the ride-on toy is overloaded or the driving conditions are too severe. Once a fuse has tripped, remove your foot from the pedal and wait approximately 2 minutes before operating the ride-on toy again. To avoid repeated automatic shutdowns, do not overload the ride-on toy by exceeding the 130 lb maximum weight capacity or by towing anything behind the ride-on toy. Do not drive up hills or run into fixed objects, which can cause the wheels to stop spinning while power is still being supplied to the motor.</p>
<b>Ride-on toy runs sluggishly</b>	Undercharged battery	<p>Charge the battery. A new battery should have been charged for at least 18 hours before using the ride-on toy for the first time. After first-time use, recharge the battery for at least 12 hours after each use. Never charge the battery longer than 30 hours. Check all connectors.</p> <p>Make sure the battery connector is tightly plugged into the wire connector, and that the charger is plugged into the wall outlet.</p> <p>Make sure that there is power flow to the wall outlet.</p>
	Battery needs charging	Be sure to charge the battery after each use.
	Ride-on toy is overloaded	<p>Make sure you do not overload the ride-on toy by allowing more than two riders at one time, exceeding the 130 lb maximum weight capacity, or by towing objects behind the ride-on toy. If the ride-on toy is overloaded, the thermal fuse may trip, and automatically shut down operation of the ride-on toy for approximately 2 minutes. Correct the condition that lead to the overload and adjust the driving conditions to prevent repeated automatic shutdowns.</p>
	Driving conditions too stressful	Use only on level ground.

# TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Sometimes the ride-on toy doesn't run, other times it does</b>	Loose wire or connector	Check all wires around the motors and all connectors to make sure they are tight.
<b>The battery's thermal fuse constantly trips, but the ride-on toy is not overloaded and the driving conditions are not severe</b>	Damaged battery	Replace with new battery. Replace only with an original 24 V/7 Ah battery. Do not use non-original substitute parts.
<b>Charger gets warm during use</b>	It is normal for some chargers to get warm during use and is not reason for concern.  Some chargers do not get warm during use.	No action required.  If your charger does not get warm during use, it does not mean that it is not working properly.
<b>Battery makes a sizzling or gurgling noise when charging</b>	It is normal for some batteries to make noise and swell slightly while charging and is not reason for concern.	No action required.  If your battery does not make noise or swell slightly while charging, it does not mean that it is not working properly.

## FREE WARRANTY UPGRADE WITH REGISTRATION

**Consumer Action Required**  
[dynacraftwheels.com/register](https://dynacraftwheels.com/register)



**Register My Ride**

### UPGRADE YOUR WARRANTY WITH PRODUCT REGISTRATION

Free warranty upgrade with online registration at [dynacraftwheels.com/register](https://dynacraftwheels.com/register). We respect your privacy. Any information collected by Dynacraft Wheels will never be shared with any other company or organization. See Dynacraft's privacy policy for further information: [dynacraftwheels.com/dynacraft-privacy-policy](https://dynacraftwheels.com/dynacraft-privacy-policy)

### BENEFITS OF SIGNING UP FOR FREE EXTENDED WARRANTY

- Simple, quick sign up at [dynacraftwheels.com/register](https://dynacraftwheels.com/register) (proof of purchase required).
- Extra 60 days of coverage on ride-on parts subject to wear and tear, from date of purchase.
- Transportation charges on replacement parts waived for the Limited Warranty period. See Limited Warranty for details.

For further enquiries call Customer Service at

**1-800-551-0032** or visit [dynacraftwheels.com/contact](https://dynacraftwheels.com/contact)



# LIMITED WARRANTY

This Limited Warranty ("Warranty") extends only to the original retail purchaser, who must provide proof of purchase to validate any claim. As noted below, certain aspects of this Warranty can be extended free of charge to original retailer purchasers who also register their product using the provided online registration form. Proper registration via Dynacraft's online registration form is the only way to obtain these noted extensions. This Warranty is not transferable to anyone else and is the only warranty for your Dynacraft product, to the extent permitted by law. No other express or implied warranty is given, and except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is hereby disclaimed. Part or model specifications are subject to change without notice. By purchasing and using your new electric ride-on toy you agree to be bound by the terms of this Warranty as set out below. This Warranty is subject to change without notice.

**What does this Limited Warranty cover?** This Warranty covers all parts of the electric ride-on toy to be free from defects in workmanship and materials. This Warranty is only effective if: the electric ride-on toy is used under normal conditions for its intended purposes, by a person that properly fits and is capable of controlling the vehicle; and the electric ride-on toy receives all necessary maintenance and adjustments.

**What is not covered by this Limited Warranty?** This Warranty does not include labor and transportation charges. You, the original purchaser will be responsible for labor or transportation charges associated with the repair or replacement of any parts found to be eligible for warranty coverage. Those original purchasers who qualify for the extended version of this Warranty will have transportation charges waived for the duration of the Limited Warranty period. This warranty does not cover damage caused by normal wear and tear, crash collision, misuse, abuse, neglect, improper assembly, improper maintenance, lack of maintenance, alteration, or any similar damage to the ride-on toy.

This Warranty will be void if the electric ride-on toy is ever: installed with a motor or modified in any other way; rented or used for commercial purposes; or used in a manner contrary to the instructions in the Owner's Manual included with this product. Dynacraft will not be

liable for incidental or consequential loss or damage, due directly or indirectly from use of this product.

**For how long does this Limited Warranty last?** The ride-on toy, with the exception of the battery and cosmetic parts as described below, is warranted against defective materials or workmanship for a period of one year from the original date of purchase.

The battery is warranted against defective materials or workmanship for a period of six months from the original date of purchase. For those original purchasers who qualify for the extended version of this Warranty, the battery is warranted for a period of one year from date of purchase.

Parts and accessories considered to be cosmetic and not essential for the operation of this electric ride-on toy as well as those parts and accessories subject to normal wear and tear are warranted against defective materials or workmanship for a period of 30 days from the original date of purchase. An original receipt confirming the original date of purchase is required to validate your warranty. For those original purchasers who qualify for the extended version of this Warranty, cosmetic/wear-and-tear components are covered for 90 days from date of purchase. Parts and accessories considered cosmetic include, but are not limited to: mirrors; doors; fenders; stickers/decals; decorations/accessories; and fur Coverings (for plush animal electric ride on toys). Parts and accessories subject to wear and tear include, but are not limited to wheels and wheel components.

**What will Dynacraft do to honor this Limited Warranty?** Dynacraft will replace any component or battery confirmed to be defective and eligible for warranty replacement with the same or a functionally equivalent part. You, the original purchaser will be responsible for any and all labor or transportation charges connected with the replacement or repair of the ride-on toy or any covered parts.

**How do you make a claim under this Limited Warranty?** Warranty claims should be submitted via Dynacraft's online portal at [dyncraftwheels.com/contact](https://dyncraftwheels.com/contact). Please have your proof of purchase available before contacting to validate your claim.

Products can be registered at [dyncraftwheels.com/register](https://dyncraftwheels.com/register).

**NOTES**





# DO NOT RETURN THIS ITEM TO THE STORE

Please contact Dynacraft Customer Service for assistance.

[dyncraftwheels.com/contact](https://dyncraftwheels.com/contact) or 1-800-551-0032

Please have the following information available:

## Model Number

Example: 8000-00

## Production Date

Example: MM.DD.YYYY

## Serial Number

Example: DXXXX000000000

This information is provided on a white sticker located on your unit and is required to help us handle your request. Please do not remove the sticker from your unit.



[ycamsh.wixsite.com/neptune](https://ycamsh.wixsite.com/neptune)

**Dynacraft BSC, Inc.**  
1501 Crossgate Road  
Port Wentworth, GA 31407  
© Dynacraft. All Rights Reserved.

**Contact Customer Service**  
[dyncraftwheels.com/contact](https://dyncraftwheels.com/contact)  
1-800-551-0032

©Disney

2025 Printed in China

**BM242**